


TM-098  
2nd printing



KEE GAMES  
a wholly  
owned subsidiary  
of Atari, Inc.

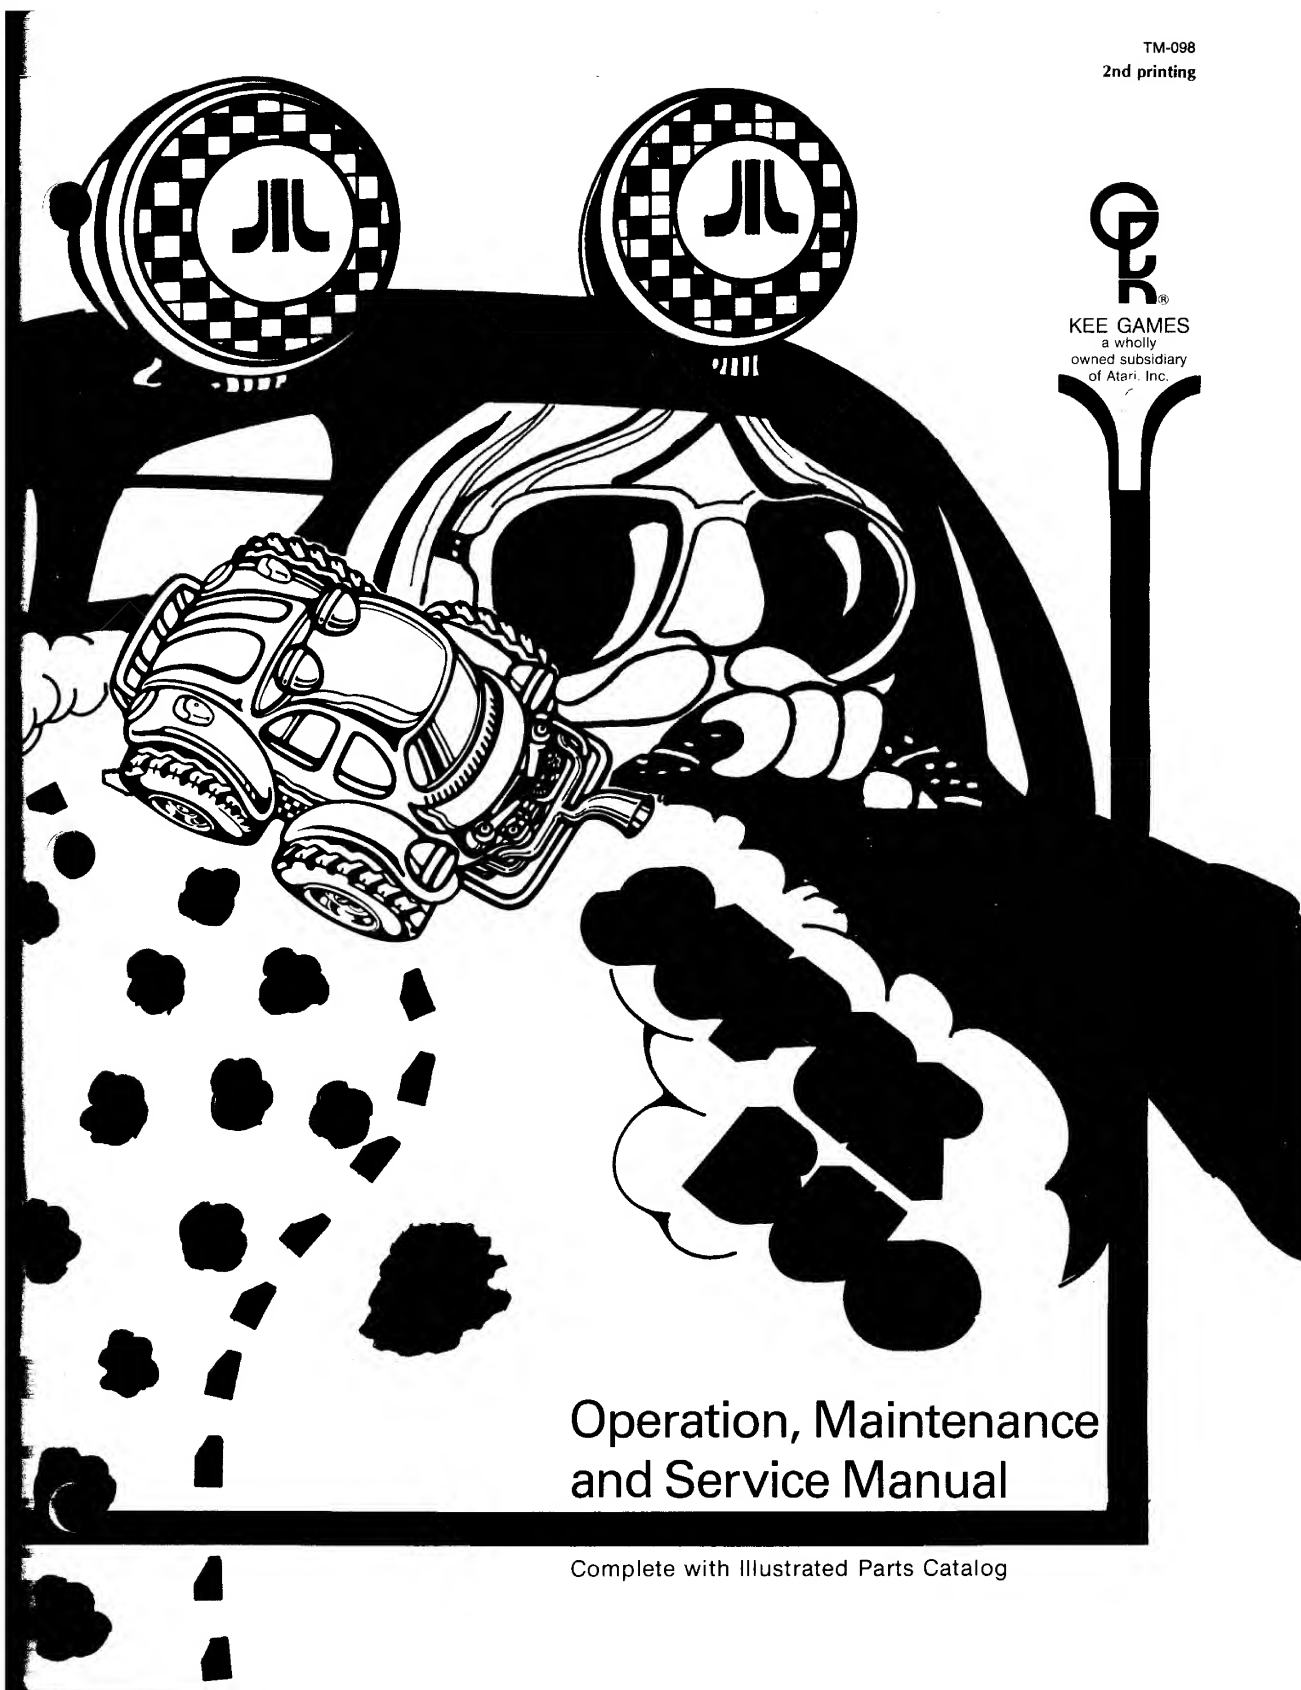

## Operation, Maintenance and Service Manual

Complete with Illustrated Parts Catalog

— N O T E —

The TV picture will move slightly during the first hour of warm up. The mask on the face of the TV screen should then align with the video Super Bug.


# Super Bug

## Operation, Maintenance and Service Manual

ATARI INC  
1265 BORREGAS AVENUE  
P.O. BOX 9027  
SUNNYVALE, CALIFORNIA 94086  
408/745-2000 • TELEX 35-7488



**K&E**  
**KEE GAMES**  
a wholly  
owned subsidiary  
of Atari, Inc.

A Warner Communications Company 

# TABLE OF CONTENTS

## 1 LOCATION SETUP

|  |   |
|--|---|
| A. INTRODUCTION .....                            | 1 |
| B. UNPACKING INSTRUCTIONS .....                  | 2 |
| Examination for Shipping Damage .....            | 2 |
| Mechanical Inspection .....                      | 2 |
| C. INSTALLATION REQUIREMENTS FOR SUPER BUG ..... | 2 |
| Power Requirements .....                         | 2 |
| Temperature Range .....                          | 2 |
| Humidity Range .....                             | 2 |
| Location Space Requirements .....                | 2 |
| Type of Power Cord .....                         | 2 |
| Interlock and Power On/Off Switches .....        | 2 |
| D. SELF-TEST PROCEDURE .....                     | 3 |
| E. OPERATOR OPTIONS .....                        | 4 |

## 2 GAME PLAY

|                         |   |
|-------------------------|---|
| A. ATTRACT MODE .....   | 7 |
| B. PLAY MODE .....      | 8 |
| C. SELF-TEST MODE ..... | 8 |

## 3 MAINTENANCE AND ADJUSTMENTS

|  |    |
|--|----|
| A. COIN MECHANISM .....                        | 10 |
| Components on Coin Door .....                  | 10 |
| Access to Coin Mechanisms .....                | 10 |
| Cleaning of Coin Paths .....                   | 10 |
| Lubrication .....                              | 11 |
| Adjustment of Coin Switch Trip Wire .....      | 12 |
| Mechanical Adjustments on Coin Mechanism ..... | 12 |
| General Troubleshooting Hints .....            | 12 |
| B. CLEANING .....                              | 12 |
| C. ADJUSTMENTS ON TV MONITOR .....             | 12 |
| D. TV MONITOR REMOVAL .....                    | 14 |
| E. FUSE REPLACEMENT .....                      | 14 |
| F. LAMP REPLACEMENT .....                      | 14 |
| G. STEERING PCB REPLACEMENT .....              | 14 |
| H. START SWITCH REPLACEMENT .....              | 15 |

## 4 THEORY OF OPERATION

|                                  |    |
|----------------------------------|----|
| A. SUPER BUG GAME OVERVIEW ..... | 17 |
| B. SUPER BUG PCB OPERATION ..... | 18 |
| PCB Power .....                  | 18 |
| Microcomputer .....              | 20 |
| Watchdog Circuit .....           | 20 |
| Microcomputer Timing .....       | 20 |
| Microcomputer Addressing .....   | 20 |
| Super Bug Alphanumerics .....    | 20 |
| Playfield .....                  | 20 |
| Audio .....                      | 21 |
| Super Bug Car Picture .....      | 21 |


## 5 ILLUSTRATED PARTS CATALOG..... 35

# LIST OF ILLUSTRATIONS

|           |  |    |
|-----------|--|----|
| Figure 1  | Location of Voltage-Changing Plugs on the Power Supply | 3  |
| Figure 2  | Locations of On/Off, Interlock, and Self-Test Switches | 4  |
| Figure 3  | TV Screen During Play Mode                             | 8  |
| Figure 4  | Coin Door Assembly                                     | 10 |
| Figure 5  | Hinging Open the Magnet Gate Assembly                  | 10 |
| Figure 6  | Removal of Coin Mechanism                              | 11 |
| Figure 7  | Surfaces to Clean Inside the Coin Mechanism            | 11 |
| Figure 8  | Removal of Plate Covering Rear of Coin Slot            | 11 |
| Figure 9  | Close-Up View of Lubrication Point                     | 11 |
| Figure 10 | Detail View of Coin Switch and Trip Wire               | 12 |
| Figure 11 | Adjustments on Coin Mechanism                          | 13 |
| Figure 12 | Locations of Adjustments on TV Chassis                 | 14 |
| Figure 13 | Removal of TV Monitor                                  | 15 |
| Figure 14 | Removal of Fluorescent Lamp                            | 15 |
| Figure 15 | Removal of Start Switch                                | 16 |
| Figure 16 | Block Diagram of the Super Bug PCB                     | 18 |
| Figure 17 | Power Supply Schematic Diagram                         | 19 |
| Figure 18 | Printed Circuit Board Schematic Diagram                | 22 |
| Figure 19 | Harness Schematic                                      | 30 |
| Figure 20 | TV Monitor Schematics                                  | 32 |
| Figure 21 | Super Bug Final Assembly                               | 36 |
| Figure 22 | Control Panel Assembly                                 | 40 |
| Figure 23 | Steering Wheel Assembly                                | 42 |
| Figure 24 | H-Shift Assembly, Less Switch                          | 44 |
| Figure 25 | Start Button Assembly                                  | 46 |
| Figure 26 | Coin Door Final Assembly                               | 48 |
| Figure 27 | Coin Door Assembly                                     | 50 |
| Figure 28 | Single Foot Pedal Assembly                             | 52 |
| Figure 29 | T.V. Tray Assembly                                     | 54 |
| Figure 30 | Power Supply Assembly                                  | 56 |
| Figure 31 | RF Shield PCB Assembly                                 | 58 |
| Figure 32 | Super Bug Game PCB Assembly                            | 60 |

# LIST OF TABLES

|         |                                       |   |
|---------|---------------------------------------|---|
| Table 1 | Self-Test Procedure                   | 5 |
| Table 2 | Operator Options                      | 6 |
| Table 3 | Points Required to Earn Extended Play | 6 |

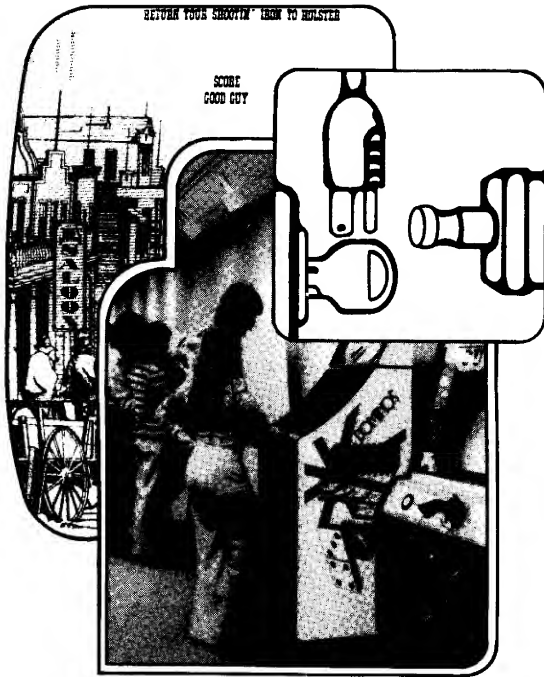


## LOCATION SETUP

### A. INTRODUCTION

SUPER BUG is a one-player driving game developed by Kee Games. The game is packaged in a distinctively styled upright cabinet that rests directly on the floor. A 23-inch TV monitor is mounted in the top front of the cabinet, with the monitor viewing screen slightly tilted from the vertical. Player-operated controls are mounted directly below the TV monitor viewing screen on the front of the game cabinet. The controls consist of a steering wheel, a four-speed gear shifter, an accelerator foot pedal, a pushbutton for track difficulty, a start pushbutton, and a pushbutton for high score reset.

Two identical coin mechanisms are mounted on the lower front center of the game cabinet, below the steering and shifting controls. Either of these two mechanisms can initiate play. The cash box is located behind a locked access door below the coin mechanisms.

The player's objective is to manipulate the Super Bug along the track in a race against time. The player must avoid sliding in oil pools in the road, or dropping into sand pits, as well as avoiding other cars, while keeping the Super Bug within the boundaries of the road.

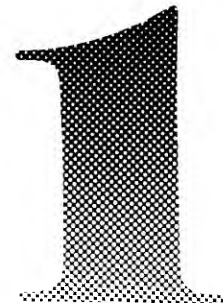

Acceleration is as in a real car. Start out in anything but first gear and the car accelerates slowly. Once the car is moving, shifting into progressively higher gears increases the speed of the car. If the car goes into an oil slick or sand pit, it slides, with sound of sliding from the game cabinet speaker. If the car drives into a track boundary, a tree, or another car, a crash sound will be heard from the game cabinet speaker and the TV monitor viewing screen will flash.

## **B. UNPACKING INSTRUCTIONS**

### **Examination for Shipping Damage**

Before shipment from the factory, components and subassemblies of each game are carefully checked for proper operation. However, during shipment some adjustments may have changed or parts may have shaken loose. Upon removing the game from the shipping container, first examine the exterior of the cabinet. Check for dents, chips, or broken parts. Then open the rear access panel and examine the interior of the cabinet. Any shipping damage, such as a dented, cracked or broken cabinet, or sub-assemblies broken or loose, etc. should be reported immediately to the shipper and to Kee Games.

### **Mechanical Inspection**

After determining that the game has been received in good condition, carefully inspect the interior parts and verify that:

- (a) All plug-in connectors are firmly seated.
- (b) The fuses are all seated in their holders.
- (c) No harness wires have become disconnected or pulled loose.
- (d) No loose foreign objects are present, especially metal objects that could cause electrical problems.

Be sure all major assemblies are checked. Check the game printed circuit board (PCB), the transformer, the two coin mechanisms, the speaker and fluorescent light, the player controls and the TV monitor chassis.

Do not go on to the remaining paragraphs of this section until the above mechanical inspection has been carefully completed.

## **C. INSTALLATION REQUIREMENTS FOR SUPER BUG**

Requirements for installation of Super Bug are listed in the following paragraphs:

### **Power Requirements**

Atari ships Super Bug for domestic operation on 110 VAC, rated at approximately 150 watts. The game can be changed to operate at 95 VAC, 205 VAC, or 220 VAC by unplugging the Molex connector plug (see Figure 1 for location of plug), and plugging in another Molex connector plug.

### **Temperature Range**

Location and storage temperatures should not be below 0 degrees Celsius (32 degrees Fahrenheit) and no higher than 49 degrees Celsius (120 degrees Fahrenheit).

### **Humidity Range**

Relative humidity for location or storage should be no more than 95%.

### **Location Space Requirements**

Super Bug requires a minimum of 168 centimeters (66 inches) of vertical clearance, a minimum of 65 centimeters (25.5 inches) of width clearance, and 175 centimeters (69 inches) of depth clearance. Depth clearance includes 61 centimeters (24 inches) of player space.

### **Type of Power Cord**

Kee Games has added a strain-relief power cord to Super Bug.

### **Interlock and Power On/Off Switches**

Kee Games has installed two on/off switches, as shown in Figure 2. To minimize the hazard of electric shock while you are working inside the game cabinet, an interlock switch is located at the rear access door. This switch completely removes all power from the game while the rear access door is open.

So that you can conserve energy, a power on/off switch has been added to the power circuit so you can turn the game off during closing hours. This switch is concealed above the accelerator foot pedal.

Please check for proper operation of the rear access door interlock switch by performing the following steps:

1. Unlock and open the rear access door.

2. Plug the AC power cord into a 110-volt source.
3. Set the power on/off switch to the *on* position by flipping the toggle switch toward the right of the game cabinet.
4. Close the rear access door. Within approximately thirty seconds, the TV monitor should display a picture.
5. Slowly open the rear access door until the TV monitor picture disappears. The TV monitor picture should disappear when the rear access door is opened to less than one inch at the top of the door.
6. If the results of Step 5 are OK, then the interlock switch is operating properly. If the picture does not disappear as described in Step 5, check to see if the switch is broken from its mounting or stuck

in the *on* position.

7. Close and lock the rear access door.

#### D. SELF-TEST PROCEDURE

Super Bug will test itself and will communicate with you that the game circuitry and controls are or are not operating properly. We suggest that you do the Super Bug Self-Test Procedure each time you collect the money from the cash box. All you need to do is follow the steps in Table 1. But first, please read the following explanation of the table.

Notice the three column headings of Table 1. The first column, Test Instruction, describes what you should do to make Super Bug test itself. Once you have performed each Test Instruction step, look at the picture on the Super Bug TV monitor and match that picture with the picture in the column labeled *Results if Test Passes*. Then, examine the TV Monitor picture and follow the instructions listed in the col-

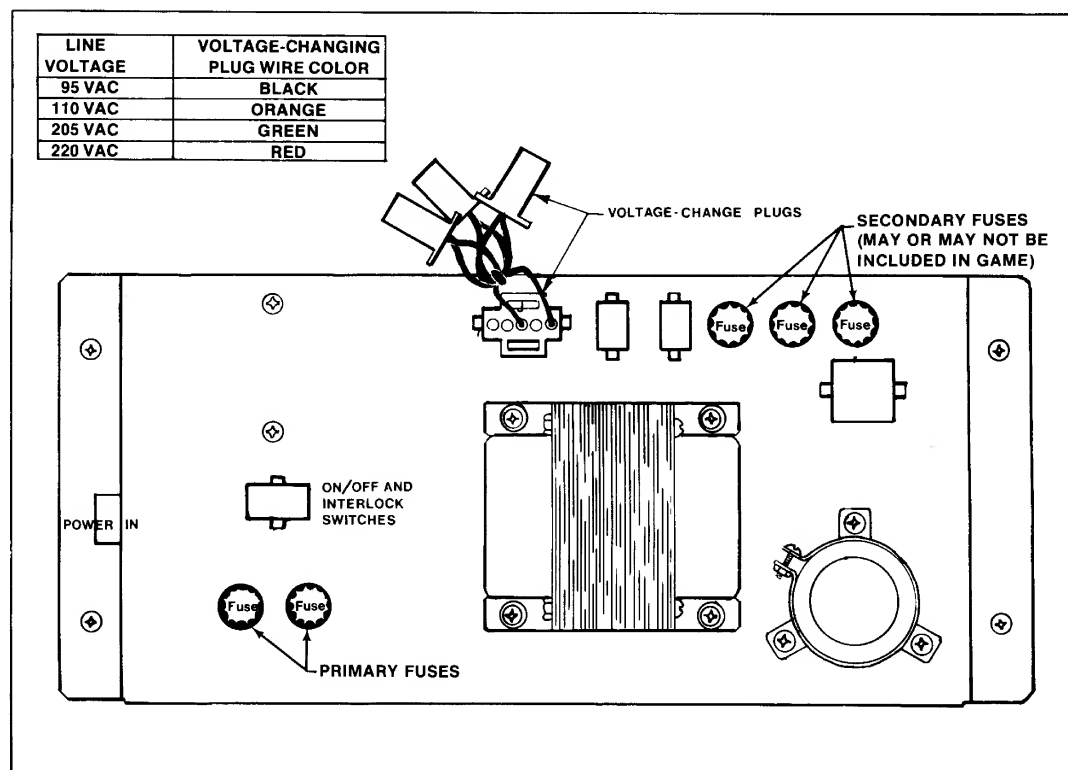


Figure 1 Location of Voltage-Changing Plugs on the Power Supply

umn labeled *Results if Test Fails*. Please note that some of the definitions are quite long.

If at any time you would like to start over again in the self-test mode, just set the Self-Test Switch to *off*, then again in the *on* position. This will begin the self-test mode at Step 1.

## E. OPERATOR OPTIONS

At this time it is best to select the game options most suited for your particular location. With the Self-test Switch set to the *off* position and Super Bug in the attract mode, the game may be set for the combinations of options you choose.

To set these options you must remove the Super Bug Printed Circuit Board (PCB) according to the following procedure:

1. Unlock and remove the rear access door.
2. Locate the RF shield in the lower right-hand corner of the cabinet.

3. Remove five #6 x ½-inch small pan-head Phillips screws from each of the long sides (total ten screws) of the RF shield assembly.
4. Slip the Super Bug PCB out of the RF shield assembly.
5. Set the switches for the desired options, as shown in Table 2.
6. Reinstall the Super Bug PCB.
7. Close and lock the rear access door.
8. Verify option functions by playing the game.

All the options except Extended Play are self-explanatory. Extended Play works like this: If a player accumulates the required number of points, the game adds 40 counts to the game timer. The number of points required for each option—liberal, medium or conservative—is a function of the selected game time option. This is explained in Table 3.

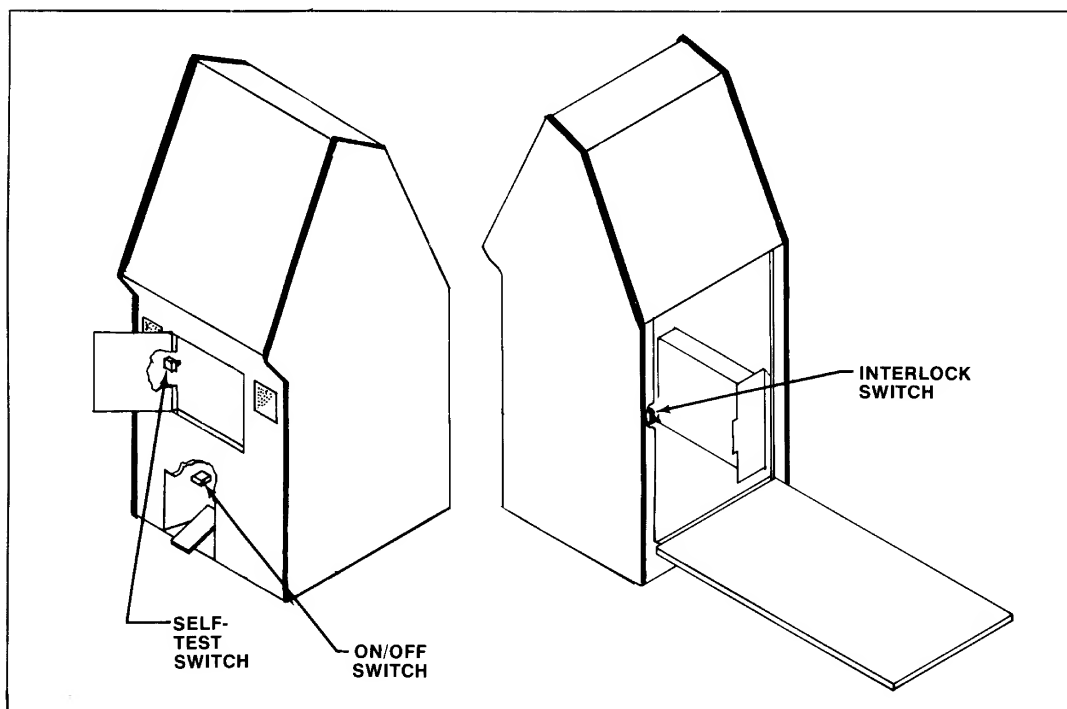


Figure 2 Locations of On/Off, Interlock, and Self-Test Switches





**Table 2 Operator Options**

| Option  | Switch Settings        |                        |                        |                        |                        |                        |                        |                        | as labeled on:<br>DIP switch<br>schematic | Result   |
|---|------------------------|------------------------|------------------------|------------------------|------------------------|------------------------|------------------------|------------------------|---|--|
|   | 8<br>7                 | 7<br>6                 | 6<br>5                 | 5<br>4                 | 4<br>3                 | 3<br>2                 | 2<br>1                 | 1<br>0                 |   |  |
| Game Cost   | on<br>on<br>off<br>off | on<br>off<br>on<br>off |                        |                        |                        |                        |                        |                        |   | Free play<br>Two plays/coin<br>One play/coin<br>one play/two coins         |
| Game Length   |                        |                        | on<br>on<br>off<br>off | on<br>off<br>on<br>off |                        |                        |                        |                        |   | 60 seconds<br>90 seconds<br>120 seconds<br>150 seconds                     |
| Extended Play   |                        |                        |                        |                        | on<br>on<br>off<br>off | on<br>off<br>on<br>off |                        |                        |   | None<br>Liberal (easy to earn)<br>Medium<br>Conservative (hard<br>to earn) |
| Game Instruction Language<br>(as displayed<br>on TV screen) |                        |                        |                        |                        |                        |                        | on<br>on<br>off<br>off | on<br>off<br>on<br>off |   | English<br>French<br>Spanish<br>German                                     |

**Table 3 Points Required to Earn Extended Play**

|                                  | Game Length Setting                      |             |              |              |
|----------------------------------|--|-------------|--------------|--------------|
|                                  | 60<br>secs.                              | 90<br>secs. | 120<br>secs. | 150<br>secs. |
| Extended Play<br>Option Setting: | Points Required to<br>Earn Extended Play |             |              |              |
| Liberal                          | 90                                       | 140         | 190          | 240          |
| Medium                           | 100                                      | 160         | 220          | 270          |
| Conservative                     | 120                                      | 180         | 240          | 300          |




## GAME PLAY

During use, Super Bug can be described as operating in one of three selectable modes: attract, play, or self-test.

### A. ATTRACT MODE

The attract mode begins when power is applied to the game. During this mode the monitor picture shows the highest score obtained by a player since the last power-up of the game. The words "GAME OVER" flash on and off. The roadway pylons, trees and road hazards move as if the car is moving along the road.

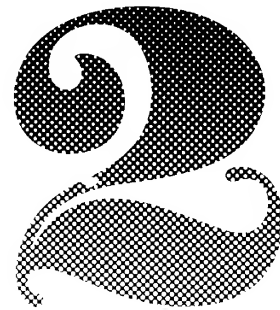

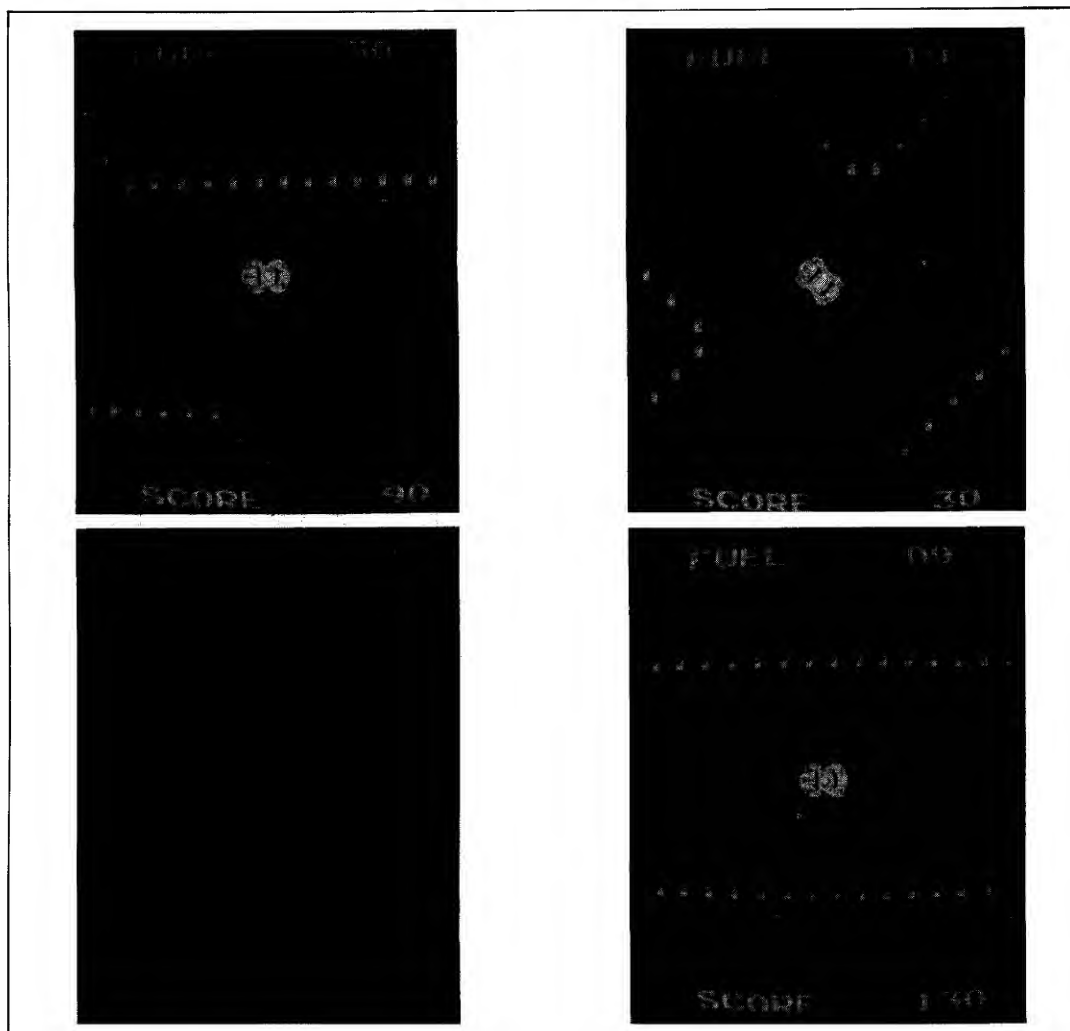


Figure 3 TV Screen During Play Mode


## B. PLAY MODE

The TV monitor display during the play mode is shown in Figure 3. During this mode, the TV monitor displays a roadway that advances when the accelerator foot pedal is pressed. Moving the shifter through the gears increases the advancing speed of the roadway. If the car comes in contact with one of the pylons, another car or a tree, the roadway pylons stop advancing, the TV monitor display flashes, and a crash sound comes from the game speaker. If the car

drives into an oil spot or sand pit, a skid sound comes from the game speaker and the car appears to slide out of control until it passes through the hazard onto the roadway again.

## C. SELF-TEST MODE


This mode of operation is used by the operator to verify that the game is working properly. This mode is explained in the Installation part of this manual.

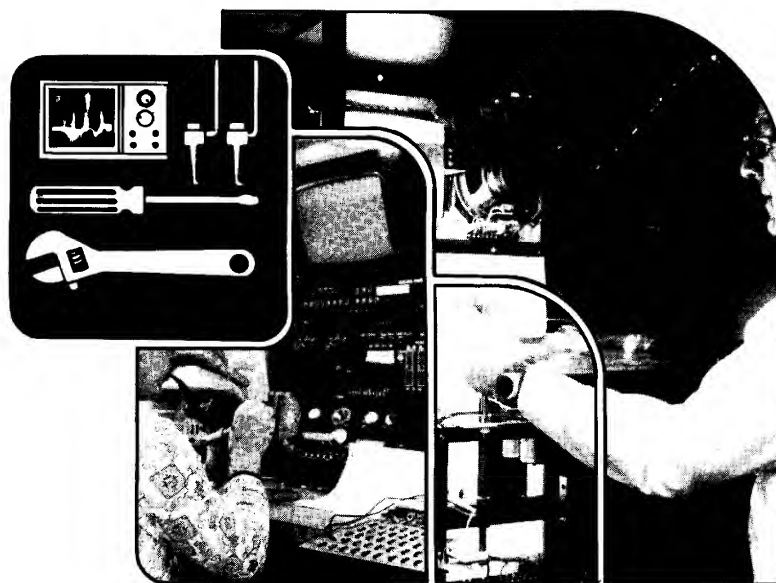

## MAINTENANCE AND ADJUSTMENTS

Due to its solid-state electronic circuitry, this Kee Games unit requires very little maintenance and only occasional adjustment. Information given in this chapter and elsewhere in this manual is intended to cover most servicing situations that may be encountered at the game site. The procedures given are in sufficient detail to be understood by a person with moderate technical ability. If reading through the manual does not lead to solving a specific maintenance problem, you can reach Atari's Customer Service Department by telephone Monday through Friday, between the hours of 7:30 a.m. to 4:00 p.m. (Pacific Time). From *inside* California, call (408) 984-1900; from *outside* California, call (800) 538-6892 (toll-free).

If you are interested in gaining more information on video game technology, especially the electronics, we recommend reading the *Video Game Operator's Handbook*, manual number TM-043. This book is available from Atari, Inc., Attn. Customer Service Department, 2175 Martin Avenue, Santa Clara, CA 95050 for \$5.00 each, or from your distributor.

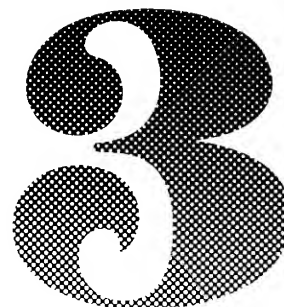

## A. COIN MECHANISM

### Components on Coin Door

Figure 4 shows the back side of the coin door assembly where the game's two coin mechanisms are mounted. Included is the lock-out coil assembly; the lock-out wires are connected to this assembly but are hidden behind the coin mechanisms. During the attract mode the microcomputer energizes the lock-out coil, causing the lock-out wires to retract far enough to allow genuine coins to reach the coin box. During the play mode and when AC power to the game has been turned off, the lock-out coil is de-energized, causing the lock-out wires to move out far enough to divert coins over to the return chute.

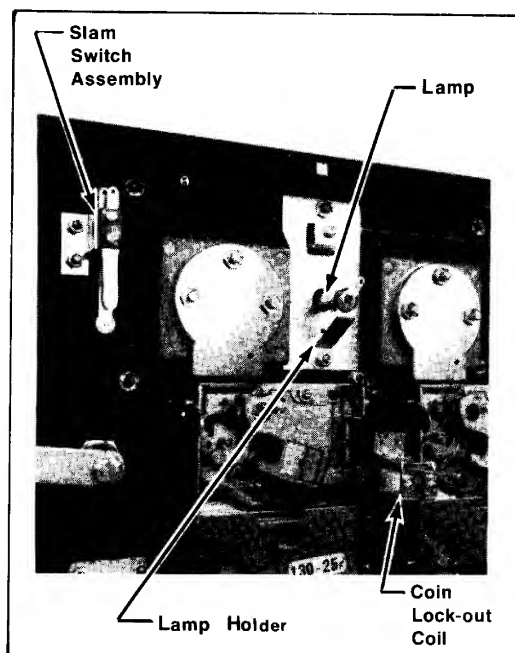


Figure 4 Coin Door Assembly

Directly below each coin mechanism is a secondary coin chute and a coin switch with a trip wire extending out to the front edge of the chute. When the trip wire is positioned correctly, a coin passing down the secondary chute and into the coin box will momentarily push the trip wire down and cause the switch contacts to close.

Also shown in the photograph in Figure 4 is a slam switch assembly. It has been included to defeat



Figure 5 Hinging Open the Magnet Gate Assembly

any players who might try to obtain free game plays by violently pounding on the coin door to momentarily close the contacts on the coin switch. The slam switch contacts connect to the microcomputer system, which will ignore coin switch signals whenever the slam switch contacts are closed.

### Access to Coin Mechanisms


To remove jammed coins, and for maintenance cleaning, each magnet gate assembly can be hinged open without removing it from the door, as shown in Figure 5. Or, if necessary, each coin mechanism can be entirely removed from the door merely by pulling back on a release lever and simultaneously tilting the mechanism back, then lifting it up and out. This is shown in Figure 6.

### Cleaning of Coin Paths

#### CAUTION

The use of an abrasive (such as steel wool or a wire brush) or a lubricant on a coin mechanism will result in rapid buildup or residue.

By talking to many operators, we have found that the best method of cleaning a coin mechanism is by using hot or boiling water and a mild detergent. A toothbrush may be used for those stubborn buildups

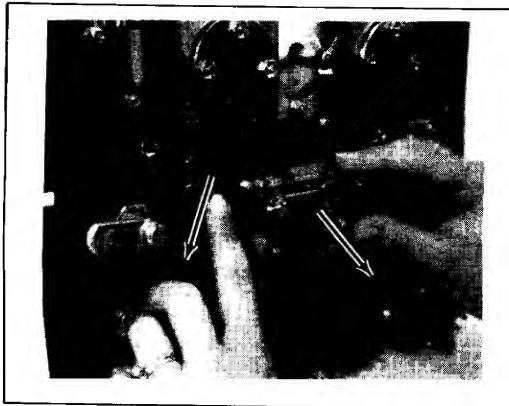

**Figure 6 Removal of Coin Mechanism**

of residue. After cleaning, flush thoroughly with hot or boiling water, then blow out all water with compressed air.

Figure 7 shows the surfaces to clean inside the coin mechanism. These include the inside surface of



**Figure 7 Surfaces to Clean Inside the Coin Mechanism**

the mainplate, and the corresponding surface of the gate assembly. There may also be metal particles clinging to the magnet itself. To remove these particles you can guide the point of a screwdriver or similar tool along the edge of the magnet.

If coins are not traveling as far as the coin mechanisms, you will need to clean the channel beneath the coin slot. To gain access to this channel, use a  $\frac{3}{8}$ -inch wrench and remove all three nuts that secure the cover plate (refer to Figure 8). Removing the plate will provide access to the entire channel.




**Figure 8 Removal of Plate Covering Rear of Coin Slot**


Also clean the inside surfaces of the secondary coin chutes, but when doing this be careful not to damage or bend the trip wires on the coin switches.

#### **Lubrication**

Do not apply lubrication to the coin mechanisms. The only points that may need lubrication (and only rarely) are the shafts of the scavenger buttons (coin rejection buttons) where they pass through the coin door. Apply only one drop of light machine oil, and be positive that no oil drops down onto a coin mechanism. Figure 9 shows this lubrication point.

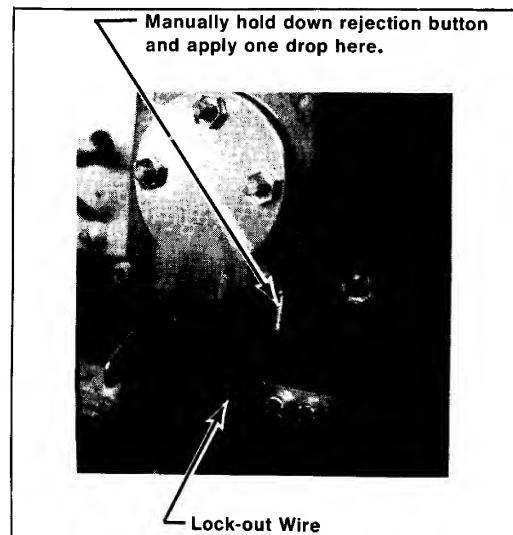

**Figure 9 Close-Up View of Lubrication Point**

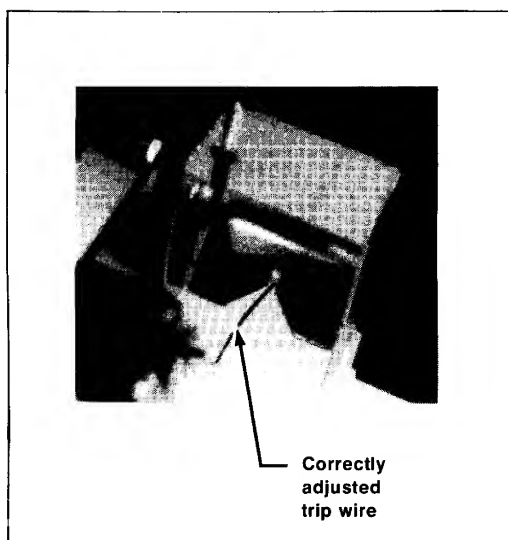

**Figure 10** Detail View of Coin Switch and Trip Wire

#### Adjustment of Coin Switch Trip Wire

In order for a coin switch to operate reliably when a coin travels down the secondary coin chute, the rest position of its trip wire should be as shown in Figure 10. Use extreme care when handling or touching these wires.

#### Mechanical Adjustments on Coin Mechanism

Coin mechanisms are adjusted prior to shipment from the factory and normally will retain these adjustments for many months. If, due to wear or other causes, it becomes necessary to make new adjustments, remove the coin mechanism from the coin door. Then take it to a clean, well lighted area where it can be placed in a vertical position on a level surface (such as a bench top). Besides a screwdriver you will need a set of several coins, including both new and old, worn ones. Figure 11 shows an exploded view of the mechanism and gives procedures for adjusting the kicker, separator, and the magnet gate. These adjustments should only be done by someone who has experience in servicing coin mechanisms and who understands their operation.

#### General Troubleshooting Hints

The first action is to look for jammed coins. After these have been removed, examine the coin path for presence of foreign material or loose objects (such as chewing gum, small metallic objects, paper wads, etc.). In cases where game usage is heavy, it may be necessary to clean the entire coin path periodically,

in order to prevent build-up of contaminants that can hinder the movement of coins through the mechanisms. Also confirm that the trip wire on each coin switch is intact, and is properly adjusted. If troubles still persist, check the conditions and positions of the lock-out wires, and the mechanical adjustments on the coin mechanisms, before suspecting the electronics. If a coin mechanism rejects genuine coins, try to readjust it. If this is not successful, then replace it with a working mechanism.

### B. CLEANING

The exteriors of game cabinets and Plexiglas® panels may be cleaned with any non-abrasive household cleanser. If desired, special coin machine cleaners that leave no residue can be obtained from your distributor. Do not dry-wipe the plex panels because any dust can scratch the surface, thereby fogging the plastic.

### C. ADJUSTMENTS ON TV MONITOR

#### NOTE

The TV monitor is accessible only from inside the game cabinet and these adjustments have to be done while the game is energized. Therefore only persons familiar with safety measures and repair procedures on electrical equipment should perform them.

The TV monitor need be adjusted only when the picture is distorted or if the contrast or brightness seem out of adjustment.

The monitor's adjustments function like those of a conventional commercial television set, except that the volume adjustment has no effect. Instead the game produces its sound in circuits separate from the TV monitor. Figure 12 shows the location of the adjustments on the rear of the chassis. When making the adjustments, follow these general guidelines:

**BRITE (Brightness)**—Perform this adjustment before the contrast. Adjust so that the white lines covering the screen just barely disappear, when the brightness is turned up.

**CONT (Contrast)**—Adjust so that the images are as bright as possible against the dark background without being blurred.



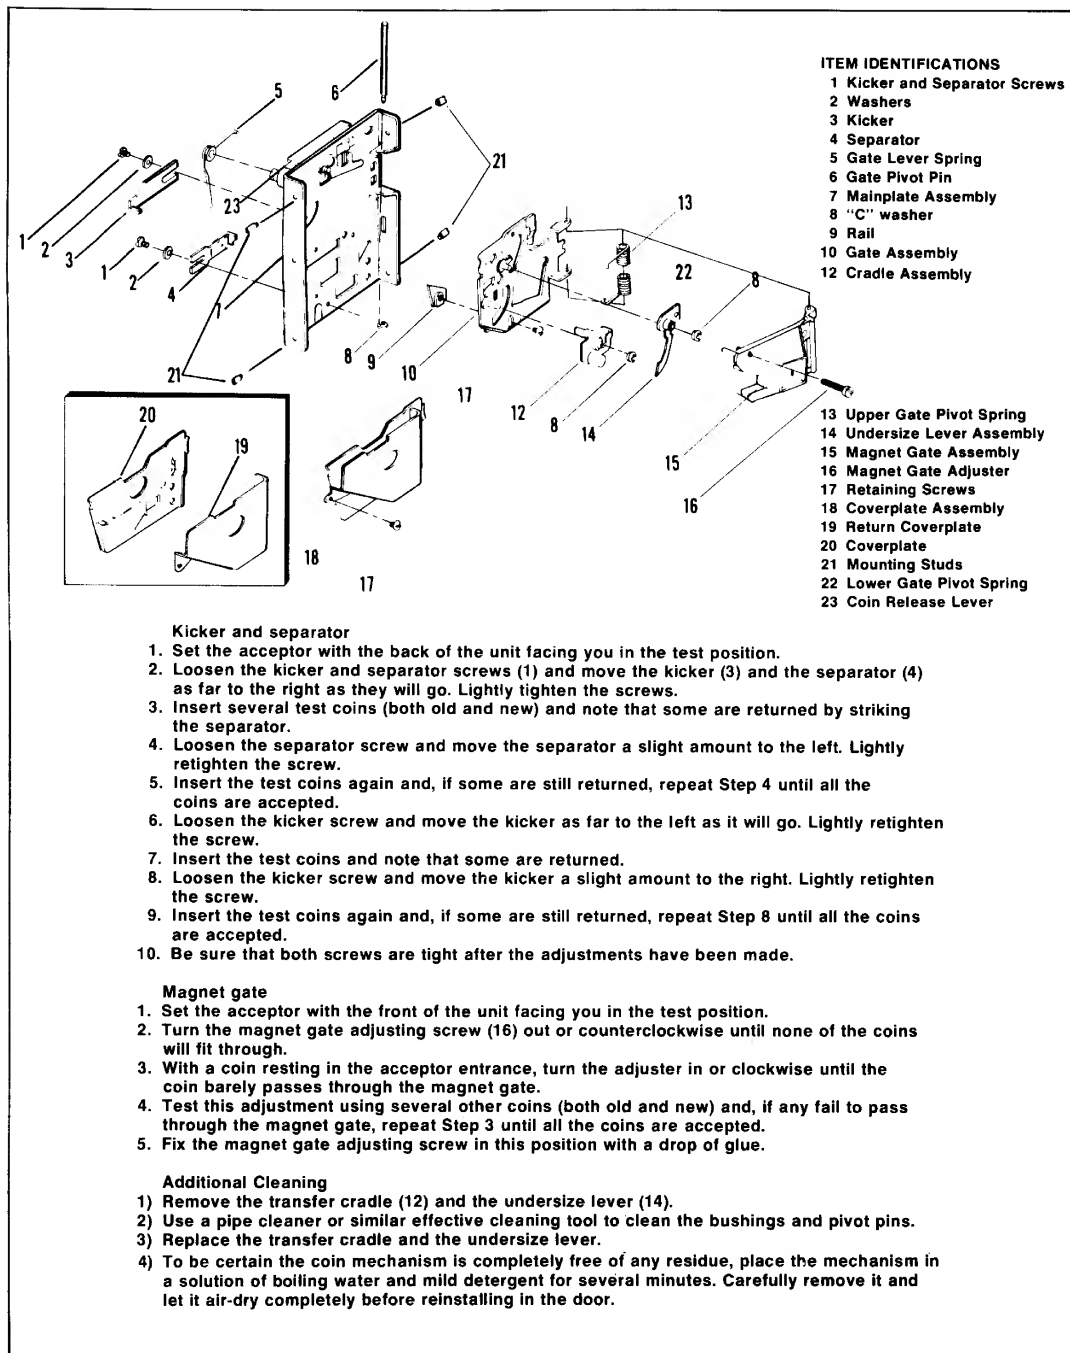


Figure 11 Adjustments on Coin Mechanism

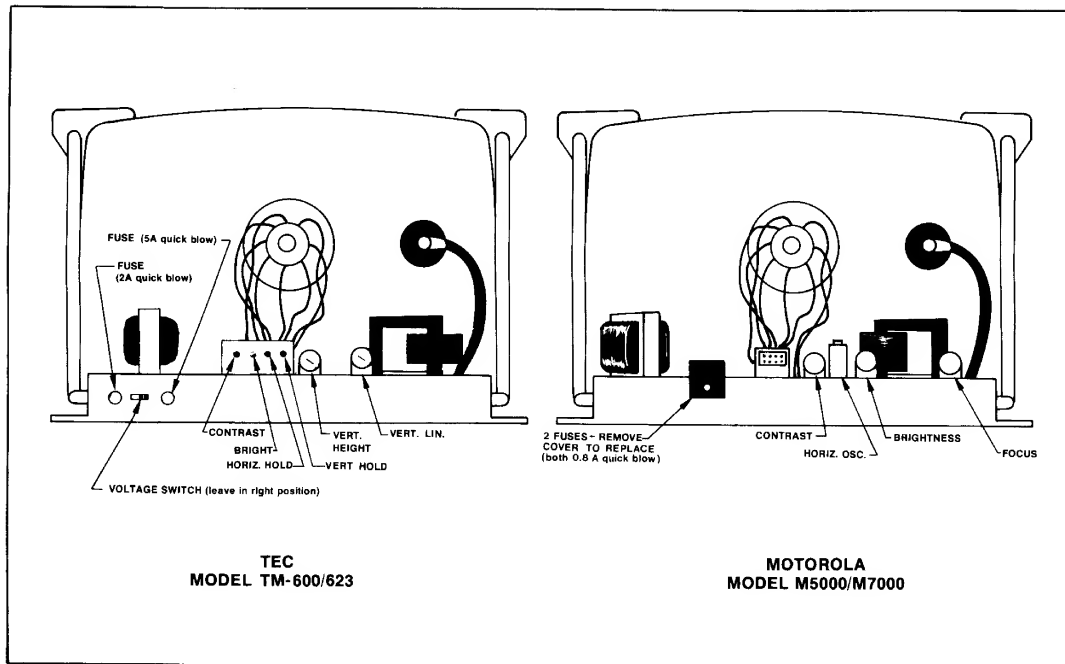


Figure 12 Locations of Adjustments on TV Chassis

HORIZ OSC. (Horizontal Oscillator)—Adjust if the picture is slightly off-center horizontally, if the images appear warped, or if the picture is broken up into a series of diagonal lines. Adjust for a stable, centered picture.

#### D. TV MONITOR REMOVAL

If the TV monitor proves to be at fault, remove the monitor as shown in Figure 13.

#### E. FUSE REPLACEMENT

Super Bug contains four fuses, two on the power supply assembly and two on the TV monitor assembly. These fuses are all easily accessible through the rear access door. Replace fuses only with the same type of fuse as follows:

TV Monitor Fuses—3AG 1-amp slow-blow, 250 volts

Power Supply Fuses—3AG 2-amp slow-blow, 250 volts

#### F. LAMP REPLACEMENT

Super Bug contains an eighteen-inch fluorescent lamp inside the top of the game cabinet assembly. To replace the lamp, remove the screws from the top Plexiglas retainer, as shown in Figure 14. Lift the at-

traction panel Plexiglas up and out of the bottom Plexiglas retainer. Replace the fluorescent tube. Replace the attraction panel plex, and the top plex retainer.

#### G. STEERING PCB REPLACEMENT

If it becomes necessary to replace the steering PCB, use the following procedure:

1. Unlock and remove the rear access door to the game cabinet.
2. Unplug the 10-pin Molex connector from the steering board PCB.
3. With a 7/16-inch wrench, remove the self-locking hexagonal nut and 1/4-inch internal tooth starlock washer from the steering wheel axle screw, while a helper holds the steering wheel at the front of the cabinet.
4. Remove the black plastic edge-toothed wheel.
5. Remove the steering PCB by removing two pan-head #2-56 x 1/2-inch Phillips screws and lifting the board out.

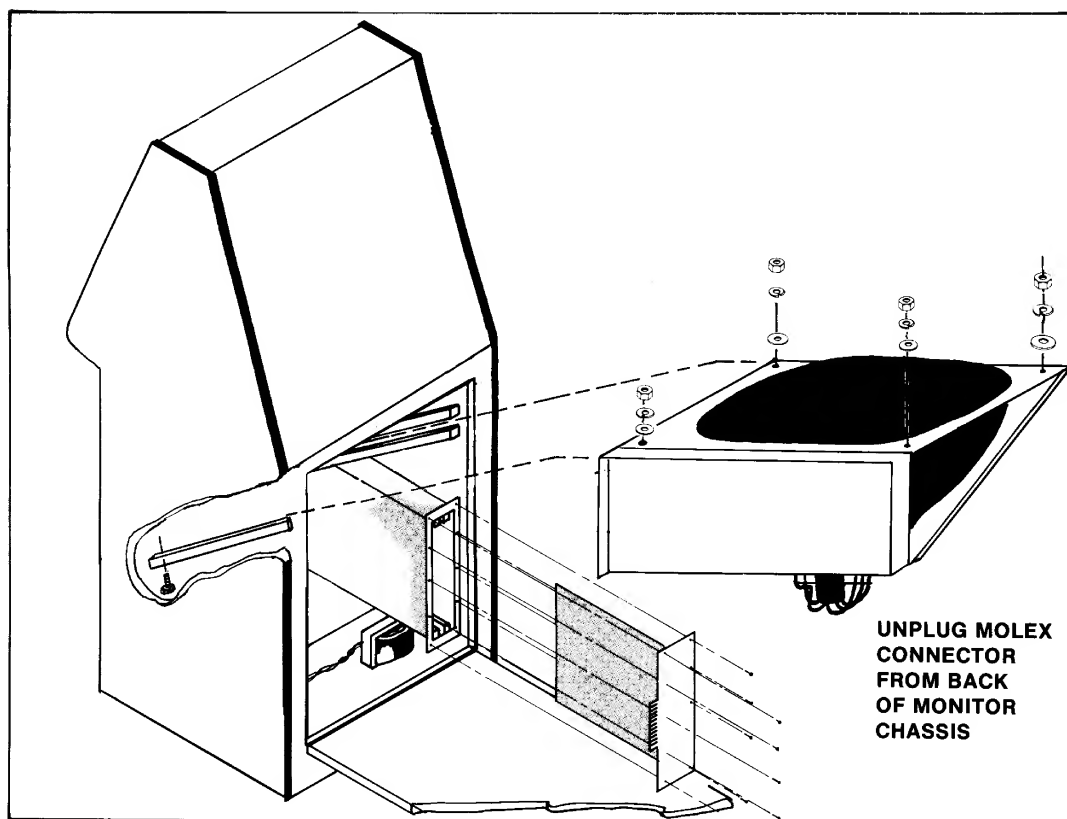


Figure 13 Removal of TV Monitor

6. Before installing the replacement steering PCB, be sure there is a sufficient amount of silicone lubricant on the inner hole of the black plastic edge-toothed wheel.
7. Install the replacement PCB by completing steps 1 through 5 in reverse order.

#### H. START SWITCH REPLACEMENT

The START pushbutton switch is backlit by two parallel-wired #47 lamps. The switch itself is a Cherry Switch with gold-plated contacts.

To change a START pushbutton, reach in through the coin door and squeeze both sides of the switch and pull out. Replace switch with Kee Games part number 062-020 switch.

To replace START switch lamps, reach in through the coin door and loosen lamp mounting screws. Remove lamps and replace with #47s.

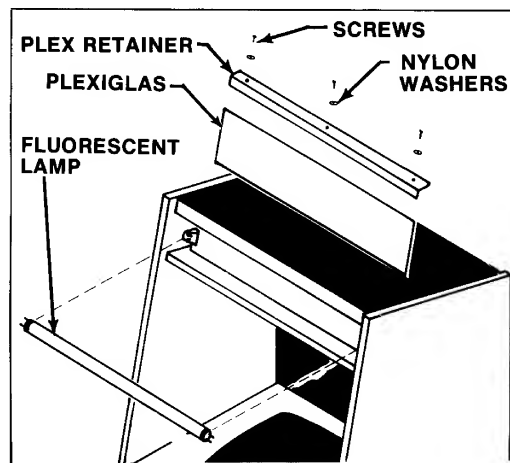


Figure 14 Removal of Fluorescent Lamp

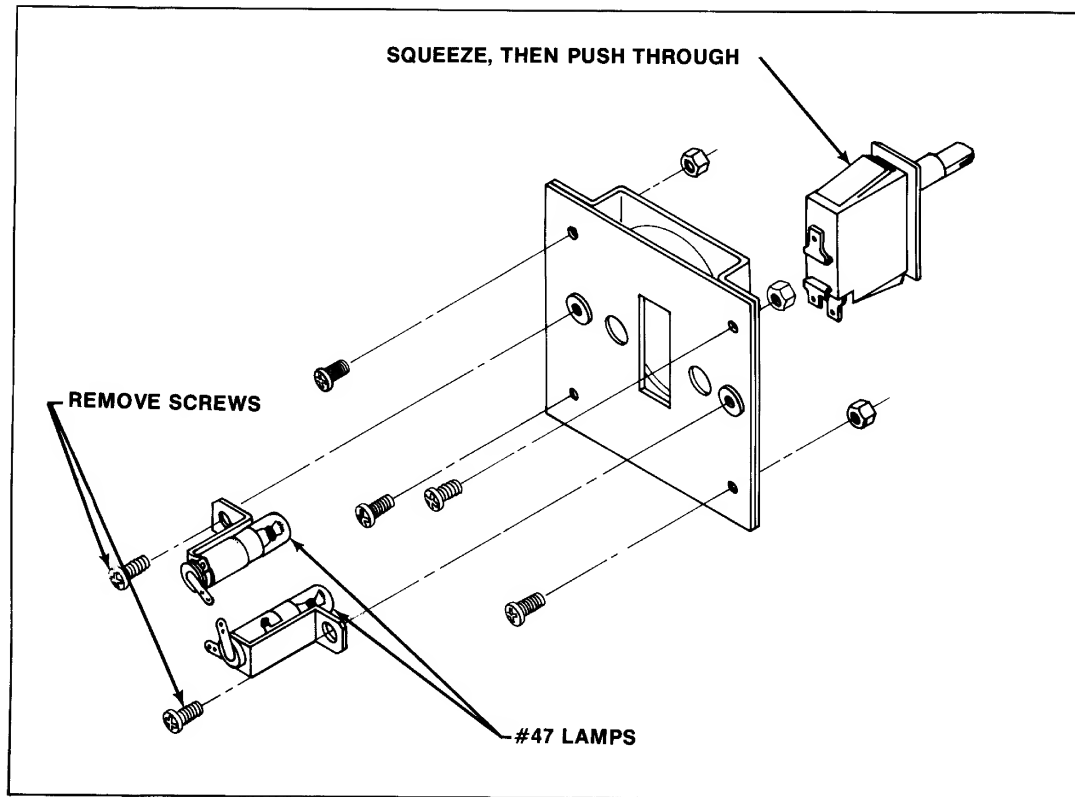


Figure 15 Removal of Start Switch



Electronically, the Super Bug game consists of a power supply, a TV monitor, a game printed circuit board, and a speaker. Electrically, the Super Bug game consists of a control panel and foot pedal, a coin door, and a fluorescent lamp.

4

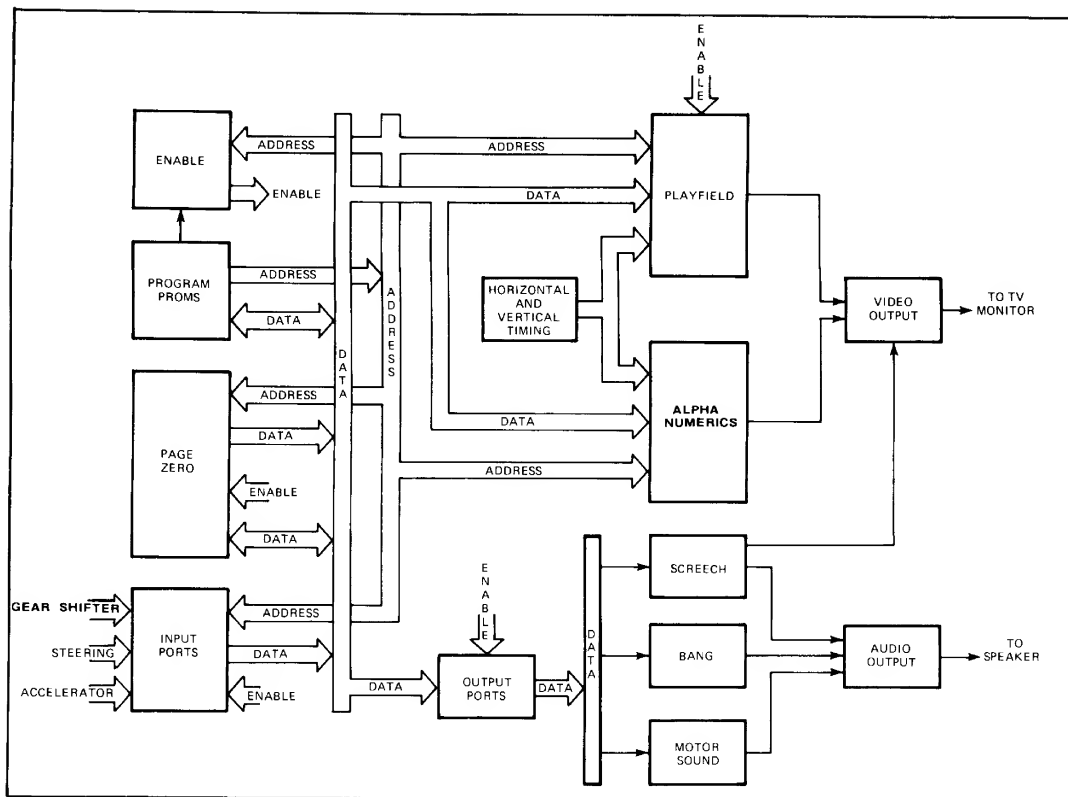


Figure 16 Block Diagram of the Super Bug PCB

## B. SUPER BUG PCB OPERATION

The PCB has a microcomputer designed and programmed to perform the functions of the Super Bug game. Figure 16 is a block diagram of the PCB.

For easy reference, the PCB is divided into 130 sections (see Figure 32 for the game's PCB assembly). These sections are identified by letters A through P (skipping letters G, I, and O because they may be easily confused with numbers 6, 1, and 0, respectively) across the short side of the PCB. Sections are identified along the long side of the PCB by numbers 1 through 10. The letters and numbers create a grid, and all IC's are located on the PCB along the grid lines. For example, to find the main horizontal motion counters N5 and N6 which are shown at the top center of sheet 1 of the schematic, look along the short side of the PCB to letter N, then down the long side to numbers 5 and 6. The two counters are located at the intersection of line N and lines 5 and 6.

At location M/N/P-10 is an LM323 regulator mounted in a large black heatsink, and a 2-ohm, 20-watt resistor. These components produce a good deal of heat during normal operation. The temperature is not extreme, but touching sensitive skin may produce a burn.

Another item we would like to bring to your attention is power distribution on the PCB. On the top of the PCB, *most* of the wide traces are DC ground. On the back of the board the wide trace along the long end of the board is +5 VDC.

### PCB Power

The PCB receives its power from the power supply in two voltage levels: 16.5 VAC and 25 VAC (see Figure 18). The 16.5 VAC is rectified off-board and regulated by an LM323 to a stable +5 VDC. The +5 VDC is distributed throughout the board to power all circuits except the audio output. The 25 VAC input is

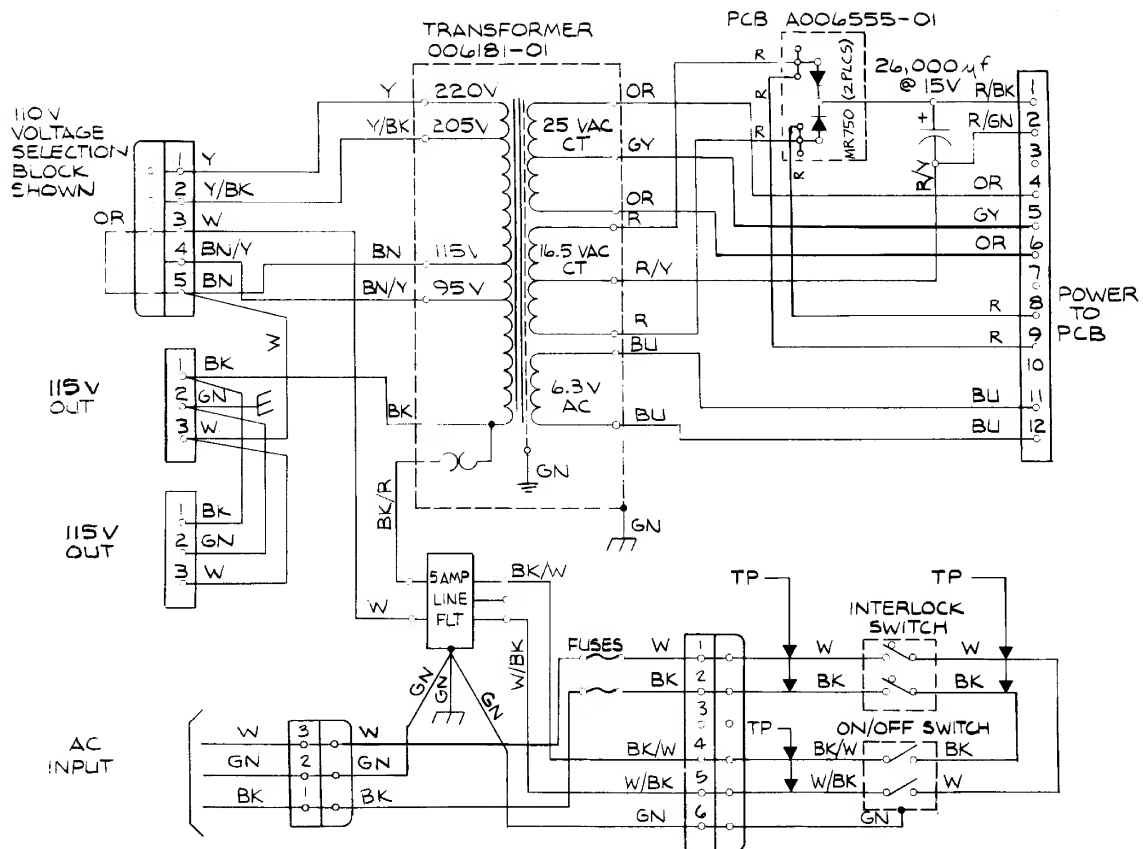


Figure 17 Power Supply Schematic Diagram

rectified through CR2 and 3, filtered by capacitor C33, and supplied to the audio output as unregulated 18 VDC.

The +5 VDC regulated voltage is also supplied through 1K pull-up resistors R1, R2, R4, R5, R21, and R25 for floating or unused inputs. Pull-up voltage is labeled *P* on the schematics.

### Microcomputer

The microcomputer consists of the Read-Only Memory (ROM), Random-Access Memory (RAM) used as scratchpad memory, and the microprocessor (see Figure 18). The microprocessor controls the microcomputer through a 16-bit address bus which addresses the ROM, RAM, playfield logic and audio circuits. An 8-bit bi-directional data bus provides a path for transferring data between the microprocessor and the various memories, the switch circuits and the playfield logic. A special watchdog circuit makes sure that the microcomputer functions properly.

### Watchdog Circuit

The watchdog circuit is a shift register, a 5-bit twisted-ring counter. In normal operation, the circuit is pulsed once each TV picture frame by the processor, resetting the counter. If five frames occur without a pulse, the counter resets the microprocessor to restart. This prevents random electronic static from upsetting game operation. The power-on hardware, or the PCB reset pushbutton, presets the counter, which in turn initializes the microprocessor and starts the attract sequence.

### Circuitry Timing

Clocks for the PCB originate from a 12-MHz crystal-controlled oscillator. The oscillator is divided by two to develop two 6-MHz clocks, designated on the schematic as 6 MHz and  $\overline{6\text{ MHz}}$ . The horizontal counters are driven by 6 MHz, which provide the horizontal synchronizing pulses 1H through 256H. The signals HBLANK and HSYNC are developed in flip-flops L7. HSYNC is the clock input for the vertical counters which provide the vertical synchronizing pulses 1V through 128V. VBLANK and VSYNC are developed by a special coded ROM, M6.

Microprocessor clocks  $\Phi 1$  and  $\Phi 2$  are developed by dividing 2H by two in flip-flop F4. Inverters E4 provide the necessary voltage levels.

### Microcomputer Addressing

The address lines (BA0 through BA15) are buffered to eliminate signal loading. The lower-

numbered lines (BA0 through BA9) address the program memory ROMs (E1, E2, H1, H2, and K1, K2). The scratchpad memory (RAM N1 and M1) are addressed by address lines BA0 through BA8.

The higher-numbered address lines (BA10 through BA15) address the address decoders. The address decoder output enables the appropriate memory or logic device.

The LEGIT signal is developed from the phase 2 clock and occurs one-half clock period after the phase 2 clock rises. This signal is used to strobe the TTL and is delayed from the clock to allow the data lines to settle. The VMA signal is an output of the microprocessor which only exists when the microprocessor wants a data transfer. VMA enables the ROM address decoder and is part of the input to develop the System Enable signal.

### Super Bug Alphanumerics

Alpha characters and numerics are stored in ROM M3, N3. Each character is traced in a block 16 lines square, at the top of the display on the TV monitor. The PROM inputs are vertical functions 1V, 2V, 4V, 8V, horizontal functions 4H and 8H, and the output of alphanumeric RAM P3. Address lines BA0 through BA4 address the desired character. Lines BA8 and BA10 with SYS EN (System Enable) enable the RAM for writing.

Chip P3 is a 128 x 8 RAM which operates with the microprocessor, accepting data through tri-state buffers M2 and N2. The output of M3 is converted from 4-bit parallel to serial output and clocked out to the video summing gates through shift register L3.

### Playfield

The playfield logic is similar to the alphanumeric, although more complicated. The ROM consists of three ICs E5, F5, and H5. To permit rotating the playfield, separate horizontal and vertical counters (C5 and E8, D5 and F8, respectively) are used. These counters can be offset by the processor to create field rotation.

ICs E6 and F6 are the playfield RAM. They are loaded through tri-state devices D6 and H6, which are connected to all eight lines of the data bus. The RAM output accesses ROM pictures and controls the various shades of gray used to make the picture on the TV monitor. There are 48 playfield objects; objects 0 through 7 are things you slide on (oil and sand), objects 16 through 47 are things you crash into (trees,



pylons, cars, and CRUNCH graphics), and objects 8 through 15 (arrows) do not interfere with game progress at all.

Playfield RAM addresses come through multiplexers E7 and F7, allowing the microprocessor to load during V Blanking.

#### **Super Bug Car Picture**

The CAR VIDEO output (sheet 3) comes, one bit at a time, from the output of multiplexer K7. This output results in a TV monitor display of the Super Bug car turned in one of 24 possible directions of rotation. However, car picture ROM K6 contains only *four* rotational pictures of the Super Bug car.

By exchanging the horizontal and vertical sync address inputs (J6, K5, L6) to car picture ROM K6, the four rotational pictures from the ROM are increased to eight pictures. By inverting the horizontal and vertical sync inputs (J5, K5, L5) to multiplexers J6, K5, and

L6, the eight rotational pictures from ROM K6 are increased to 24 pictures.

Select inputs R0 and R1 of multiplexer K7 determine the data bit output of car picture ROM K6.

Flip-flops M7 and associated gates produce the timing necessary to enable the car picture to be displayed in the center of the TV monitor.

#### **Audio**

The microprocessor puts sound data on the data bus. IC B5 latches data for the frequency of the motor sound. IC D8 latches data for the frequency of the crash sound.

Latch C9 uses address bits BA0 through BA3 to select, on command, the start lamp, the track select and the FLASH signal which inverts the video. C9 also permits the microprocessor to select the ATTRACT signal, which turns the sound on and off.



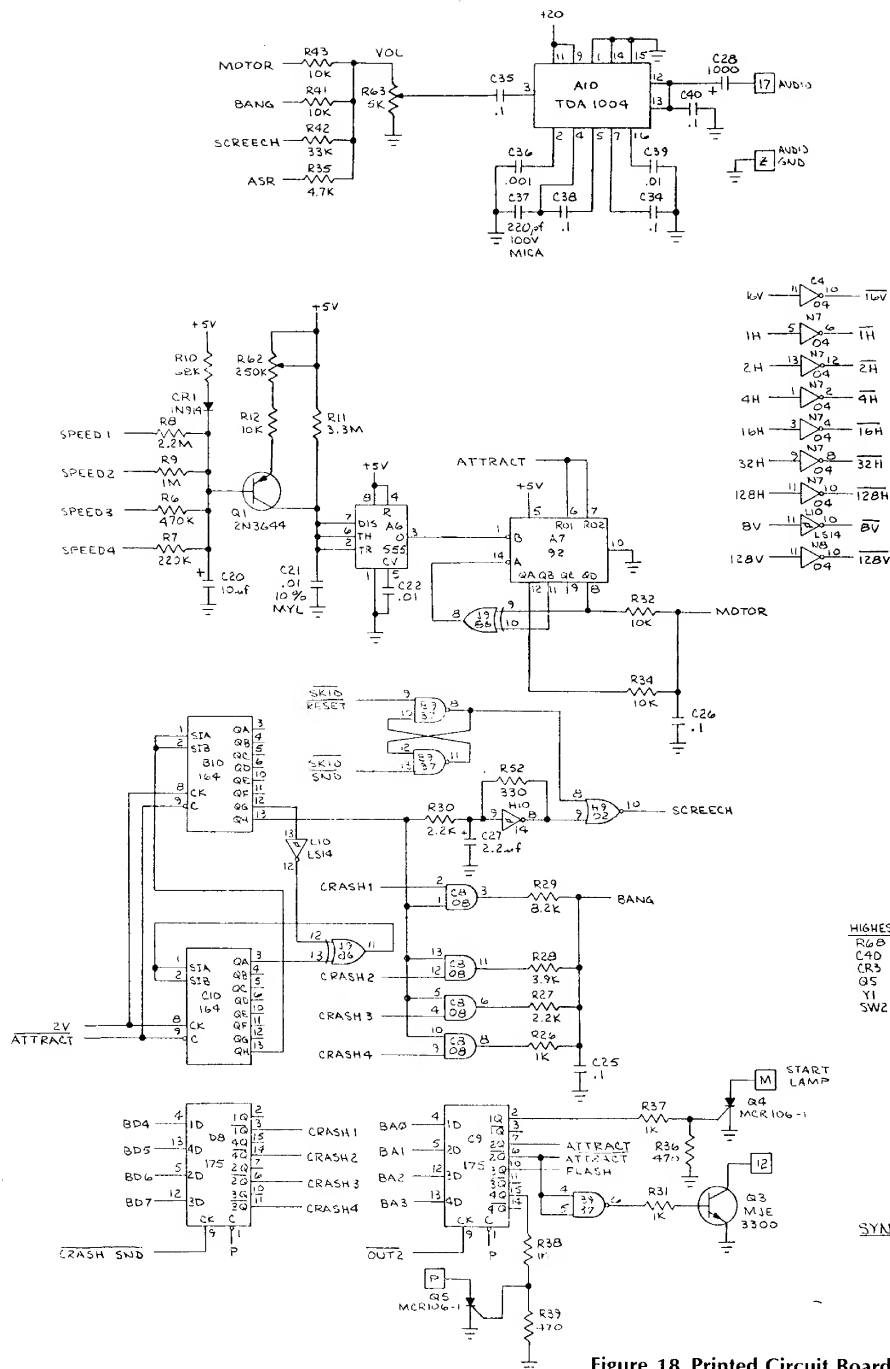
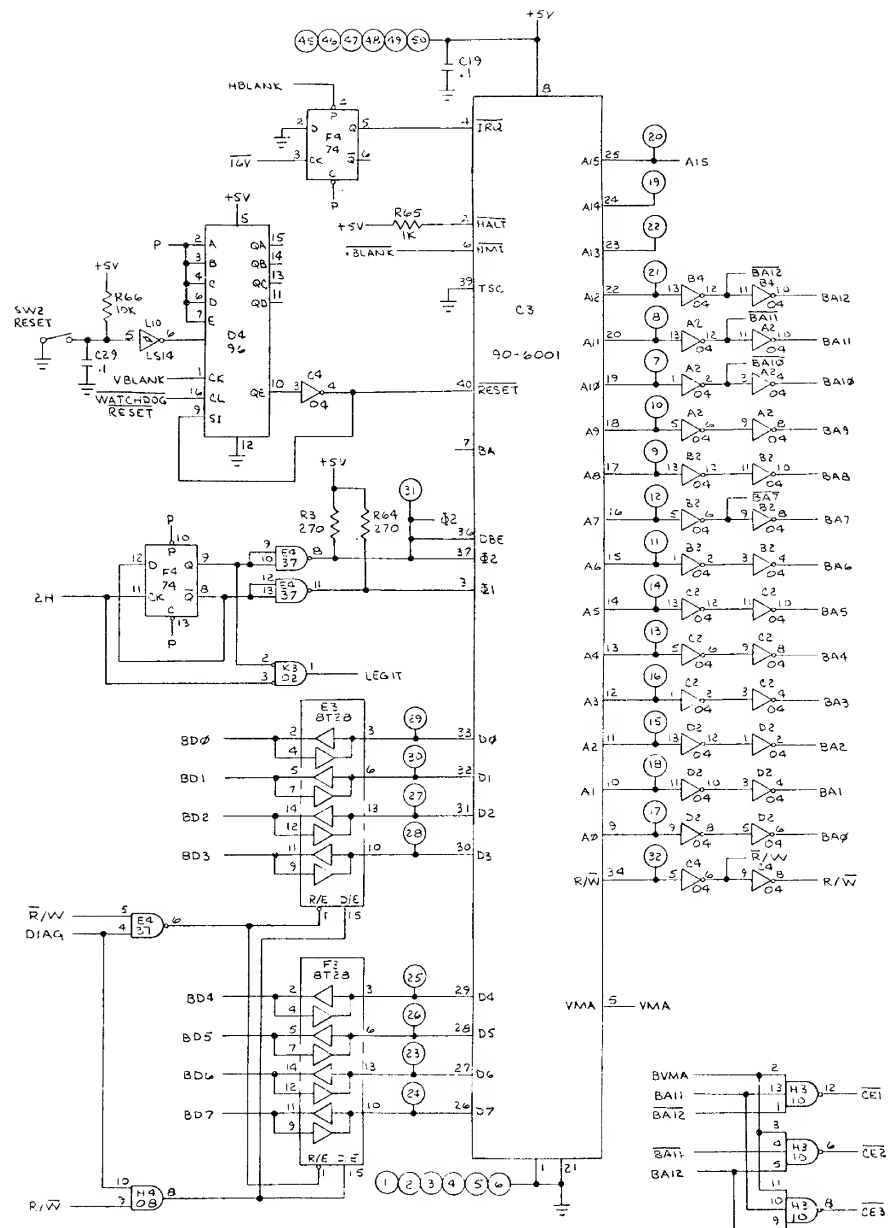


Figure 18 Printed Circuit Board Schematic Diagram  
Sheet 1 of 4




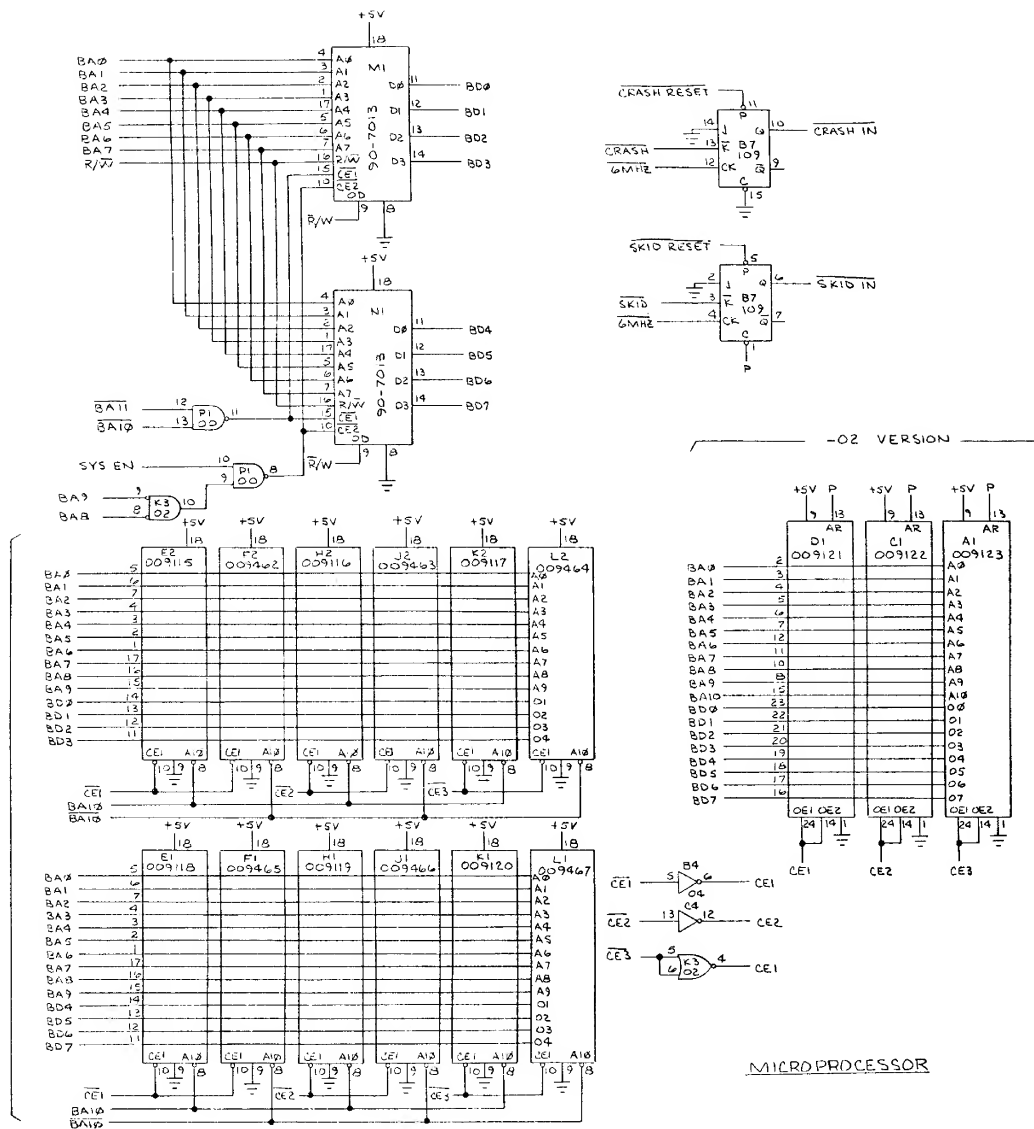



Figure 18 Printed Circuit Board Schematic Diagram  
Sheet 2 of 4





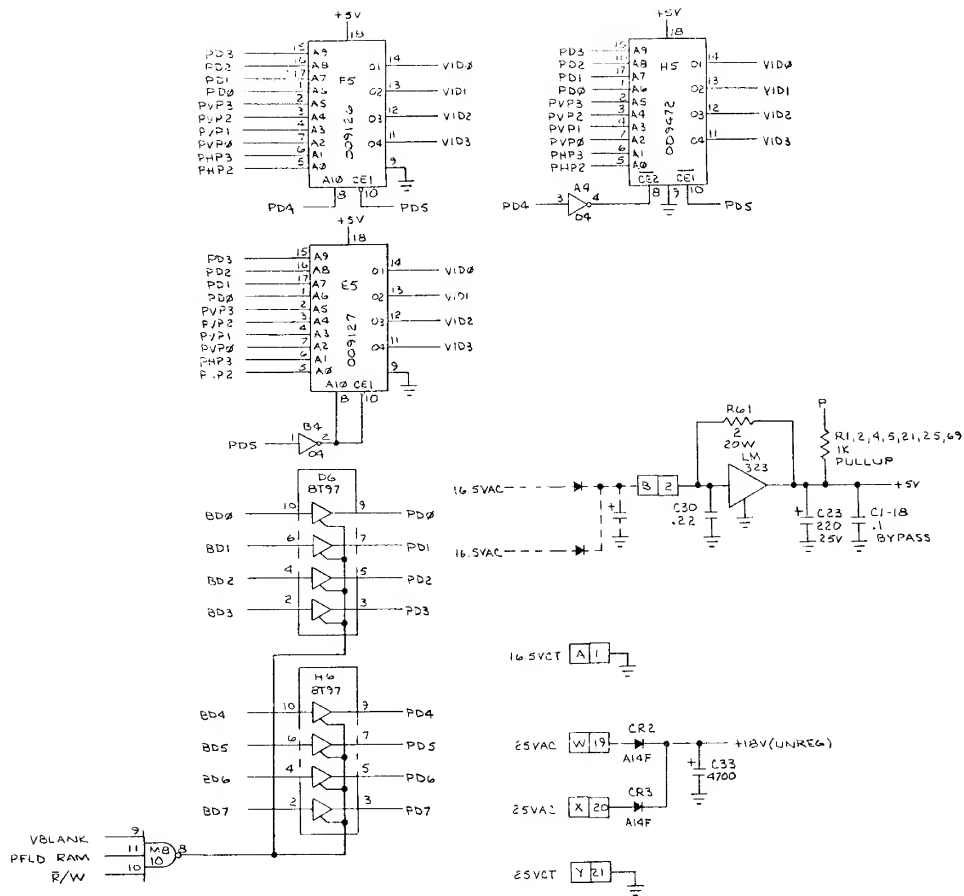

# PLAYFIELD POWER

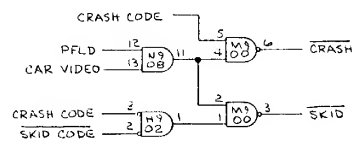



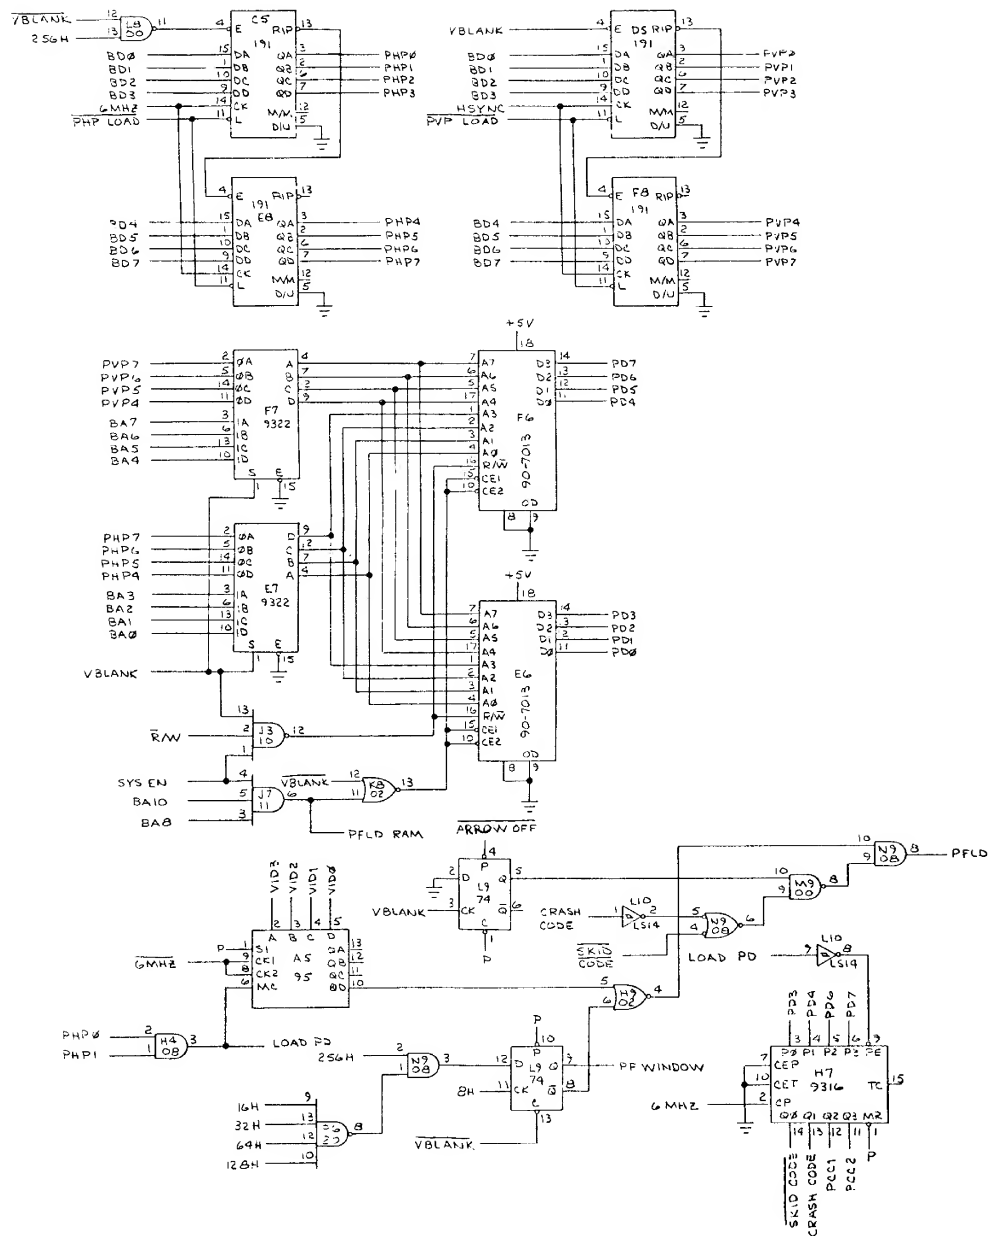
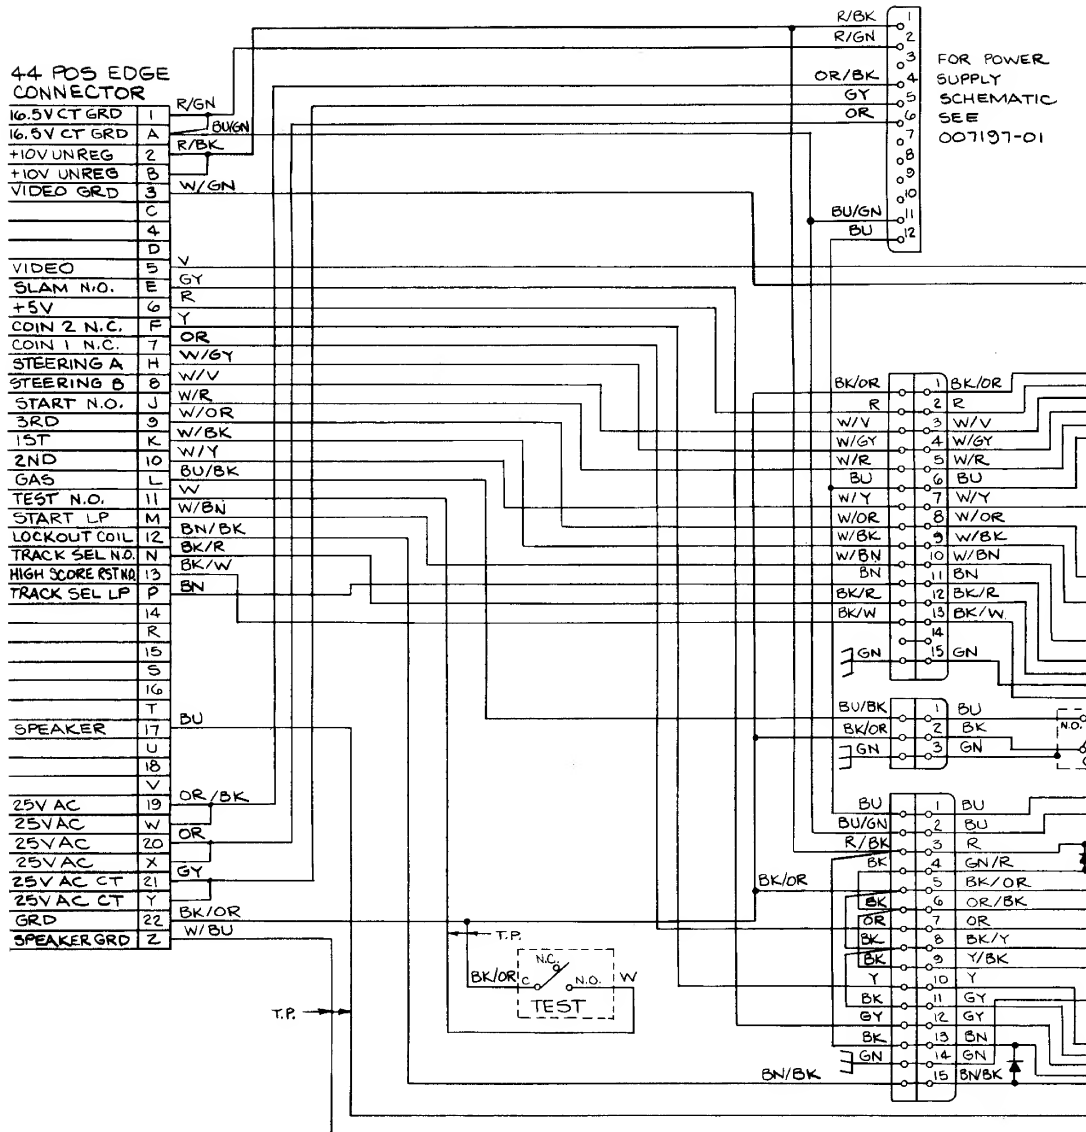


Figure 17 Printed Circuit Board Schematic Diagram  
Sheet 4 of 4

# 44 POS EDGE CONNECTOR

|                     |    |       |
|---------------------|----|-------|
| 16.5V CT GRD        | 1  | R/GN  |
| 16.5V CT GRD        | A  | R/BK  |
| +10V UNREG          | 2  | R/BK  |
| +10V UNREG          | B  | W/GN  |
| VIDEO GRD           | 3  |       |
|                     | C  |       |
|                     | D  |       |
| VIDEO               | 5  | V     |
| SLAM N.O.           | E  | GY    |
| +5V                 | 6  | R     |
| COIN 2 N.C.         | F  | Y     |
| COIN 1 N.C.         | 7  | OR    |
| STEERING A          | H  | W/GY  |
| STEERING B          | 8  | W/V   |
| START N.O.          | J  | W/R   |
| 3RD                 | 9  | W/OR  |
| 1ST                 | K  | W/BK  |
| 2ND                 | 10 | W/Y   |
| GAS                 | L  | BU/BK |
| TEST N.O.           | 11 | W     |
| START LP            | M  | W/BN  |
| LOCKOUT COIL        | 12 | BN/BK |
| TRACK SEL N.O.      | N  | BK/R  |
| HIGH SCORE RST N.O. | 13 | BK/W  |
| TRACK SEL LP        | P  | BN    |
|                     | 14 |       |
|                     | R  |       |
|                     | 15 |       |
|                     | S  |       |
|                     | 16 |       |
|                     | T  |       |
| SPEAKER             | 17 | BU    |
|                     | U  |       |
|                     | 18 |       |
|                     | V  |       |
| 25V AC              | 19 | OR/BK |
| 25V AC              | 20 | W     |
| 25V AC              | 21 | OR    |
| 25V AC              | X  | GY    |
| 25V AC CT           | Y  |       |
| GRD                 | 22 | BK/OR |
| SPEAKER GRD         | Z  | W/BU  |

FOR POWER  
SUPPLY  
SCHEMATIC  
SEE  
007197-01



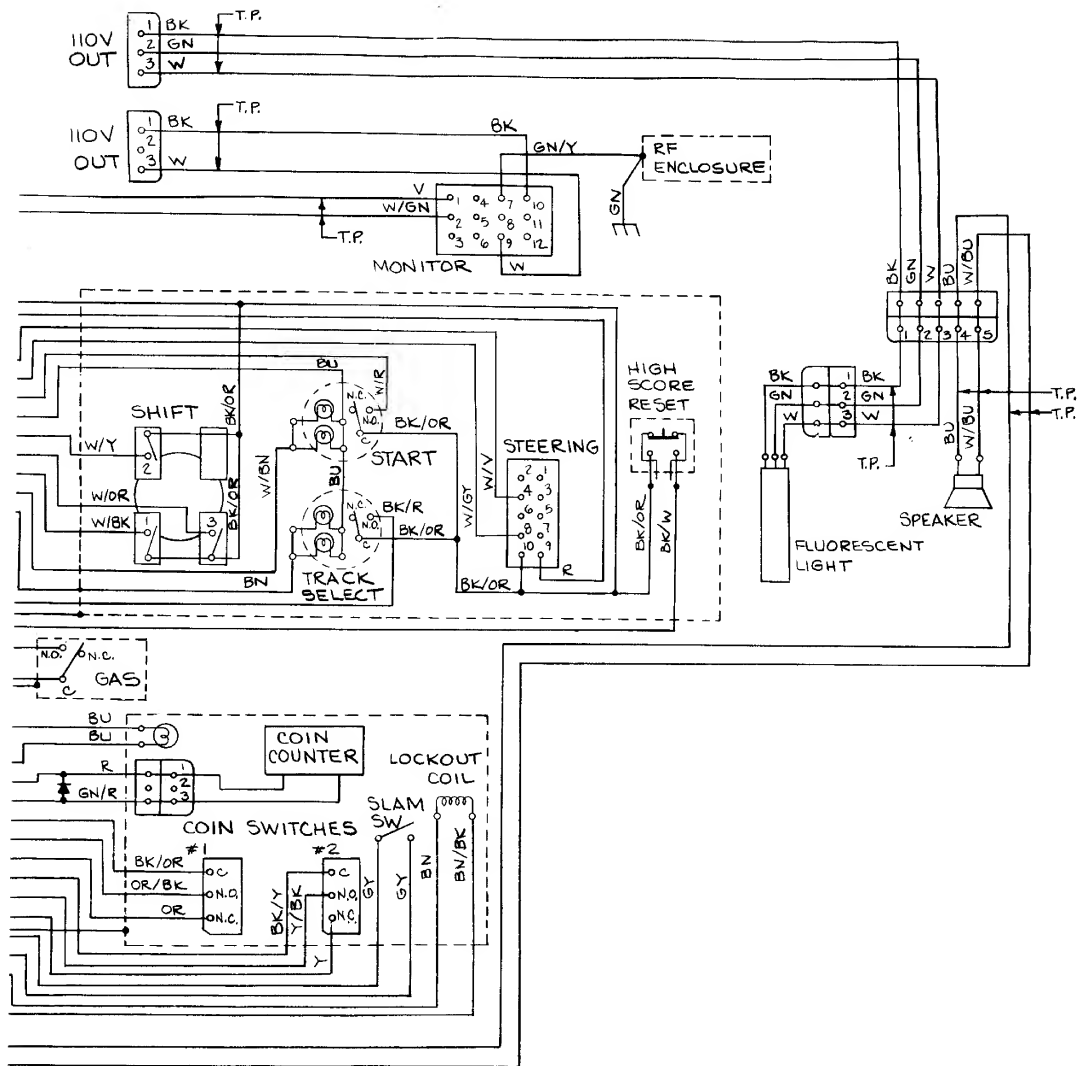


Figure 19 Harness Schematic




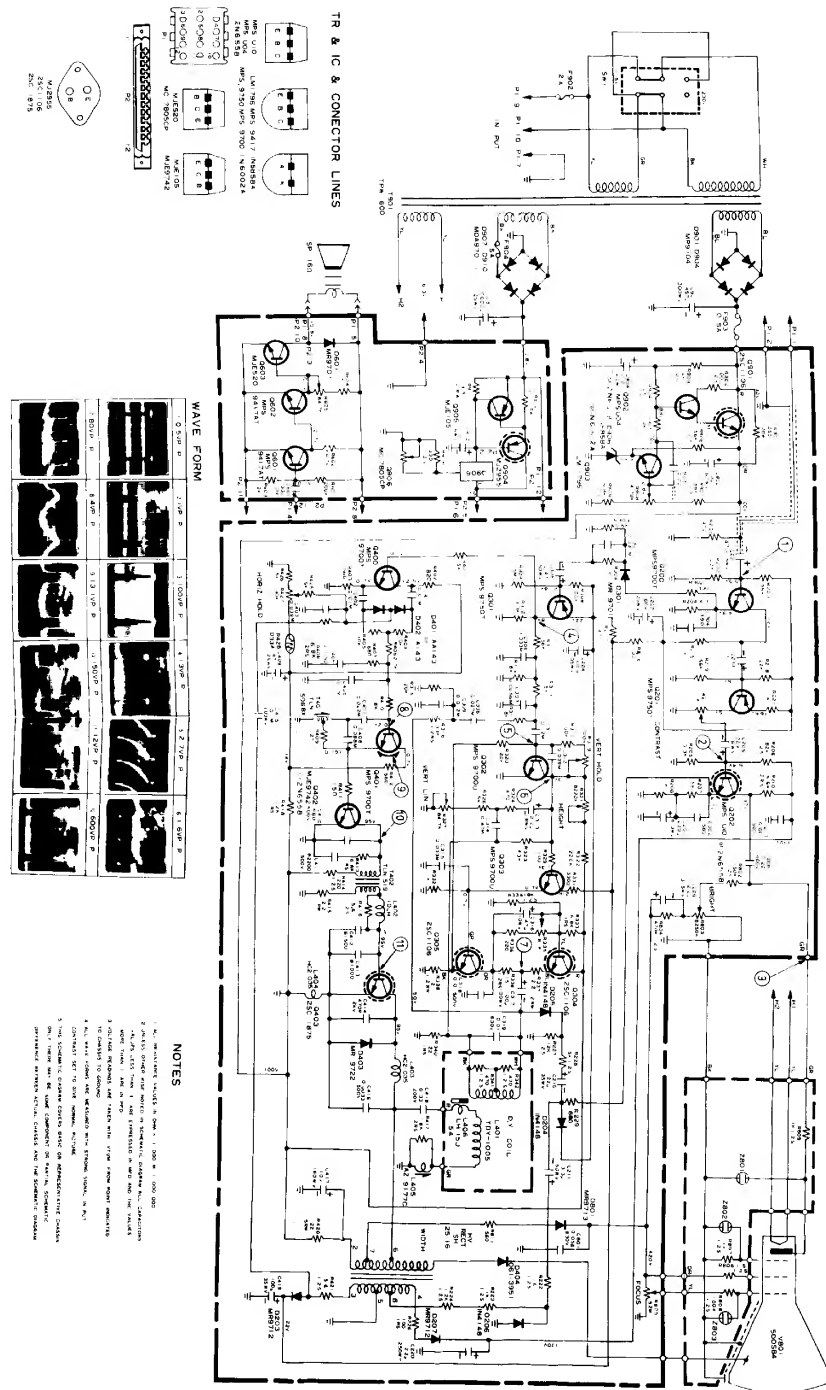


Figure 20 TEC TV Monitor Schematic

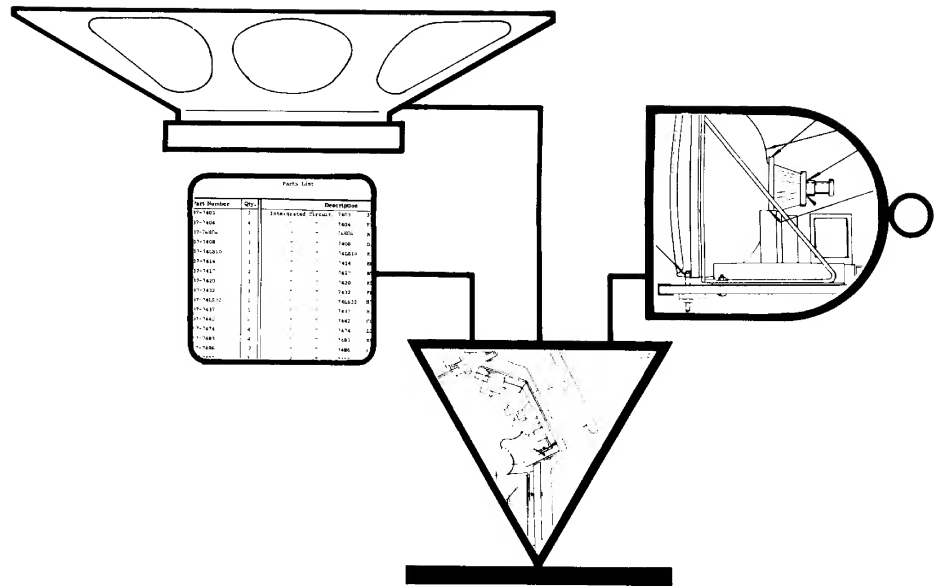


## ILLUSTRATED PARTS CATALOG

The purpose of this Chapter is to provide you with the necessary information for ordering replacement parts for the Super Bug Game.

When ordering parts from your distributor, give the part number, part name, applicable figure number of this list, and the serial number of your **Super Bug** game. This will help to avoid confusion and mistakes in your order. We hope the results will be less downtime and more profit from your game.

If there are any questions about this list, please contact Atari's Customer Service Department by telephone Monday through Friday, from 7:30 a.m. to 4 p.m. Pacific Time. From California, Alaska and Hawaii, call (408) 984-1900, from the remaining 47 states call (800) 538-6892 (toll-free).

Your game will include either the Motorola or TEC monitor, depending on their availability during production.

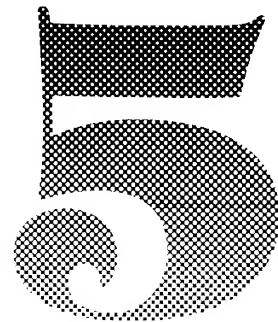


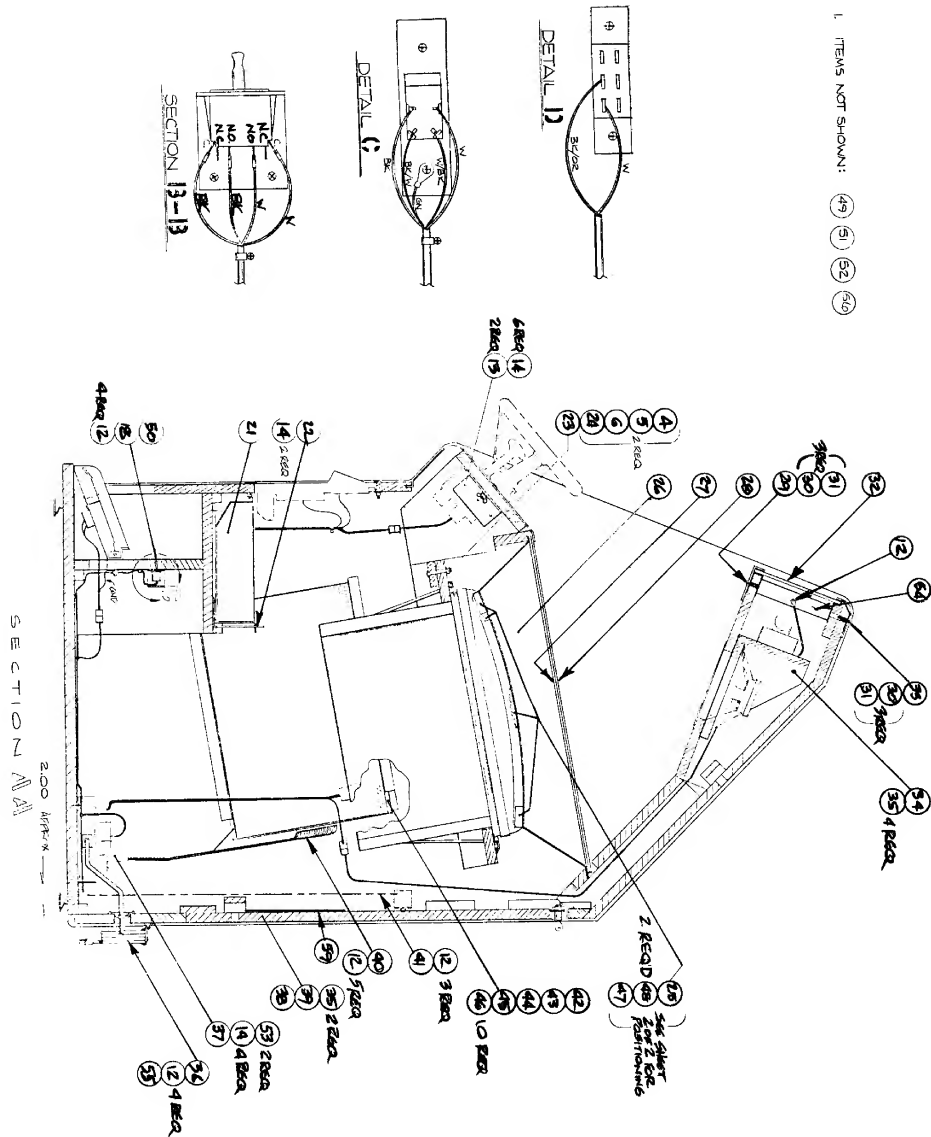


Figure 21 Super Bug Final Assembly A008765-01 B





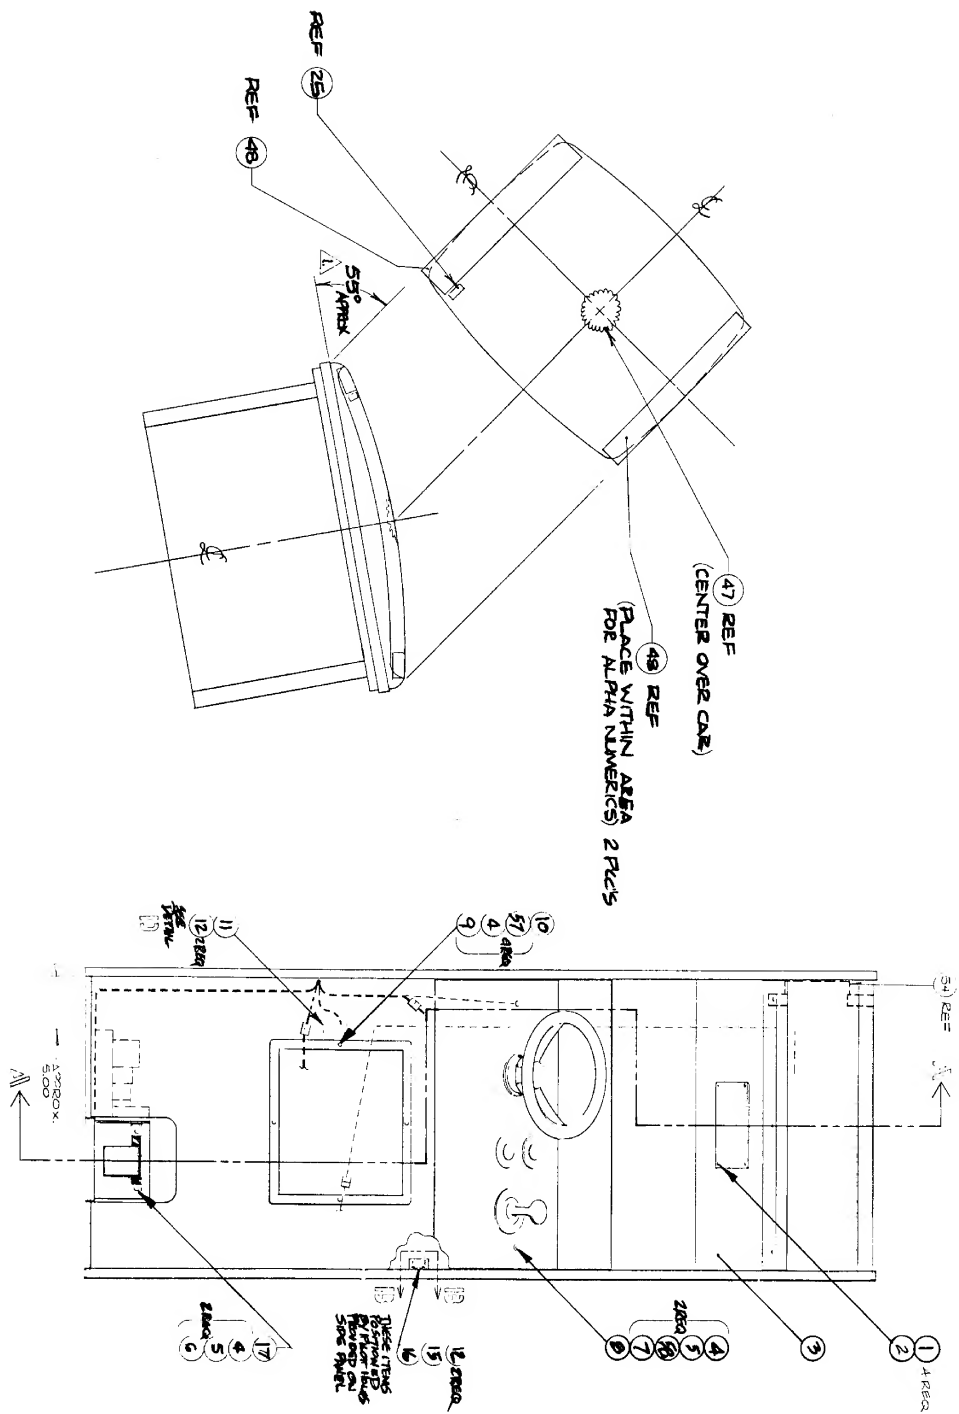

| Item | Part Number | Qty. | Description  |
|------|-------------|------|--|
| 1    | 73-77004    | 4    | Pop Rivet, 3/16" O.D. x .68" Long                        |
| 2    | 005419-01   | 1    | Grill, Speaker   |
| 3    | A008728-02  | 1    | Cab. Assembly with Graphics                              |
| 4    | 75-0155     | 10   | Washer, Flat, 1/2"                                       |
| 5    | 75-045      | 6    | Nut, 1/20, Machine Hexagon                               |
| 6    | 75-5155     | 2    | Bolt, Carriage, 1/4-20 x 1.50 Lg., Black                 |
| 7    | 75-55248    | 2    | Control Panel Assembly - See Figure 22                   |
| 8    | A008844-01  | 4    | Bolt, Carriage, 1/4-20 x 1.00" Lg., Blk                  |
| 9    | 75-55168    | 1    | Coin Door Assembly - See Figure 26                       |
| 10   | A009083-01  | 1    | Slide Switch Assembly                                    |
| 11   | A006548-01  | 21   | Screw, Sm., Pan Hd., Phil., #6 x 5/8" Lg.                |
| 12   | 72-6610     | 2    | Bracket, Panel Mfg.                                      |
| 13   | 002728-01   | 12   | Screw, Sm., #8 x 3/4 Lg. Phil. Pan Hd.                   |
| 14   | 72-6612     | 1    | AC Power Interlock Switch                                |
| 15   | 000268-02   | 1    | Bracket, Switch Mounting                                 |
| 16   | A008845-01  | 1    | Single Foot Pedal Assembly, with Harness - See Figure 29 |
| 17   | A006449-01  | 1    | On-Off Switch Assembly                                   |
| 18   |             |      |  |
| 19   |             |      |  |
| 20   |             |      |  |
| 21   | A007902-01  | 1    | Cash Box Body  |
| 22   | 006874-01   | 1    | Bracket, Coin Box  |
| 23   | A008764-01  | 1    | R.F. Tray Assembly - See Figure 23                       |
| 24   | 75-55328    | 2    | Bolt, Carriage, 1/4-20 x 2.00" Lg.                       |
| 25   | 006319-02   | 1    | Copright Decal (1977)                                    |
| 26   | 008767-01   | 1    | Base, Carboard   |
| 27   | 008759-02   | 1    | Monitor Plex   |
| 28   | 008760-01   | 1    | Monitor Plex with Graphics                               |
| 29   | 003051-01   | 1    | Upper Plex Retainer                                      |
| 30   | 75-99090006 | 6    | Well Nut, Blind Hole Fastener, 10-32                     |
| 31   | 82-8016     | 1    | Screw, Button Hd., Socket Cap, 10-32 x 1.00" Lg.         |
| 32   | 008758-01   | 1    | Display Plex with Graphics                               |
| 33   | 008764-01   | 1    | Plex Retainer  |
| 34   | A005430     | 1    | Display Assembly   |
| 35   | 82-1824     | 6    | Wood Screw, #8 x 1.50" Lg. Flat Hd. Phil.                |
| 36   | A007784-01  | 1    | Power Cord Assembly                                      |
| 37   | A007197-01  | 1    | Power Supply Assembly, Type "5" - See Figure 30          |
| 38   | A007299-01  | 1    | Rear Door Assembly w/ Lock                               |
| 39   | 005233-01   | 1    | Rear Door Seal   |
| 40   | A008769-01  | 1    | Main Harness   |
| 41   | A008771-01  | 1    | Power Switch Harness                                     |
| 42   | A005452-02  | 1    | R.F. Box Shield Assy - See Figure 31                     |
| 43   | A007353-01  | 1    | R.F. Shield Assembly (Super Bug) (17.50) - See Figure 32 |
| 44   | A007778-01  | 1    | P.C. Board Assembly, (Super Bug) (17.50) - See Figure 32 |
| 45   | 72-6608     | 1    | Screw, Sm., Pan Hd., Phil., #8 x 1" Lg.                  |
| 46   | 008846-01   | 10   | Screw, Sm., Pan Hd., Phil., #6 x 1" Lg.                  |
| 47   | 005240-04   | 2    | Monitor Overlay, Car                                     |
| 48   | TM-098      | 1    | Decal, Color Strips                                      |
| 49   | 007103-01   | 2    | Tech. Manual   |
| 50   | A009424-XX  | 1    | On-Off Switch Cover                                      |
| 51   | 006305-01   | 1    | Shipping Container Assy.                                 |
| 52   | 46-203202   | 1    | Printed Poly Bag   |
| 53   | 78-6601216  | 2    | Fuses, 3 Ag fast acting, 2 amp                           |
| 54   | 78-25001    | 1    | Aluminum Foil (Approx. 2 Ft.)                            |
| 55   | 75-9905055  | 1    | Screw Down Tie Wrap                                      |
| 56   | 75-935      | 4    | 1/20 Shallow Pattern Lock Nut                            |
| 57   | 75-935      | 2    | Wingnut, 1/20  |
| 58   | ST-098      | 1    | Self Test Chart, Super Bug                               |
| 59   |             |      |  |

ATARI  
A Warner Communications Company

Figure 21 Super Bug Final Assembly Parts List

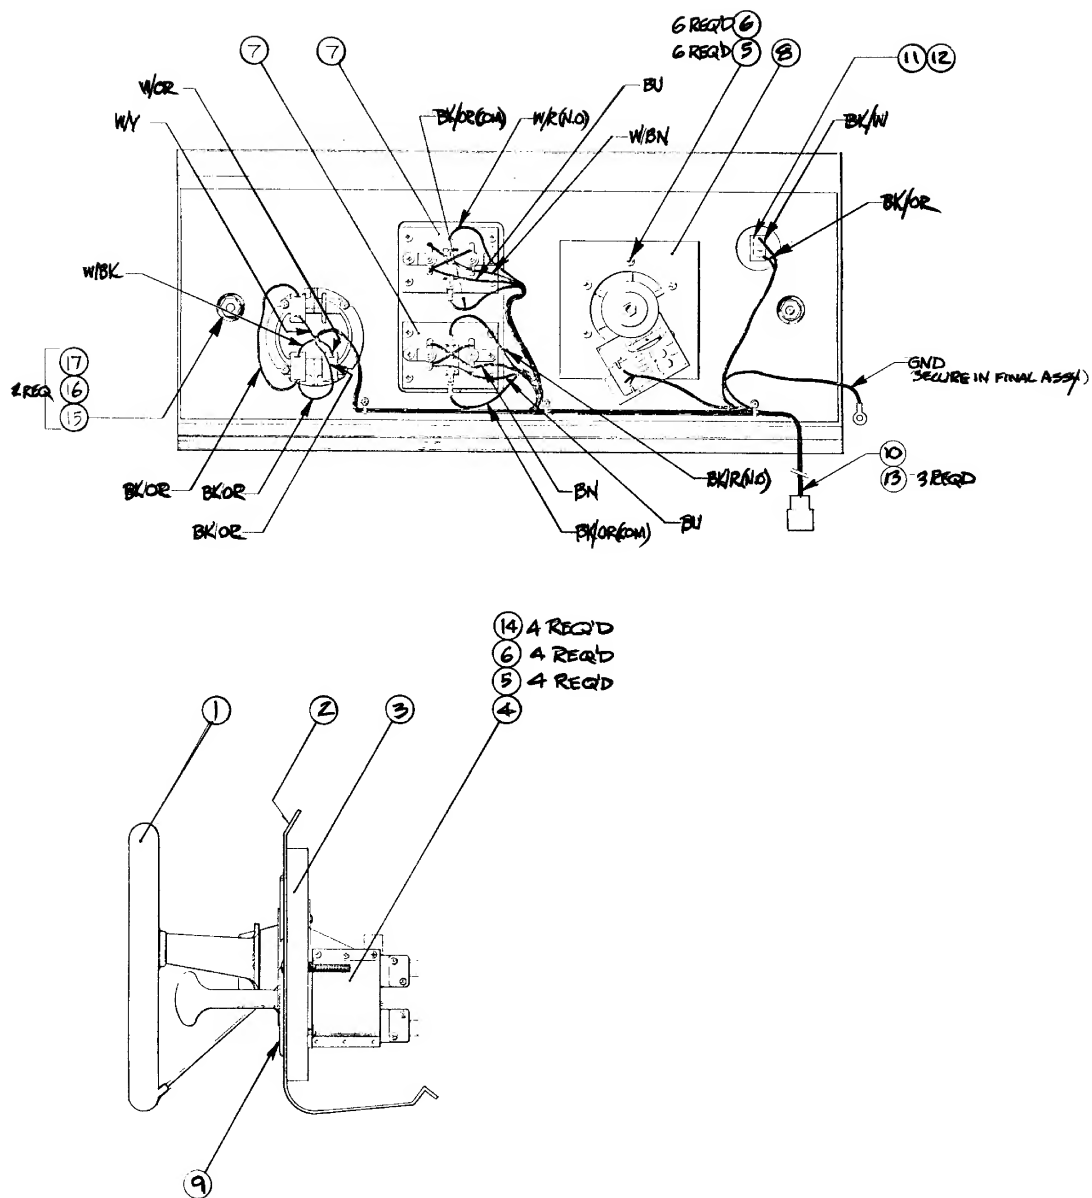


Figure 22 Control Panel Assembly A008844-01 B



| Item | Part Number | Qty. | Description  |
|------|-------------|------|--|
| 1    | A000598-02  | 1    | Steering Wheel Assembly - See Figure 23                |
| 2    | 008761-01   | 1    | Control Panel W/Graphics                               |
| 3    | 008754-01   | 1    | Control Panel Back-Up                                  |
| 4    | A000608-03  | 1    | 'H' Shift Assembly Less Switch - See Figure 24         |
| 5    | 85-22F112   | 10   | Mach. Screws, #10-24 x 3/4 Lg., Pan Hd. Phil. Type "F" |
| 6    | 75-040      | 10   | #10 Lock Washer  |
| 7    | A007357-01  | 2    | Start Button Assembly - See Figure 25                  |
| 8    | 000567      | 1    | Bow Washer   |
| 9    | 005255      | 1    | Shift Bezel  |
| 10   | A008770-01  | 1    | Control Panel Harness                                  |
| 11   | 001856-01   | 1    | Bezel, Switch  |
| 12   | 62-009      | 1    | Switch, Licon (blk Cap)                                |
| 13   | 72-6610     | 3    | Screw, Sm. Pan Hd. Phil., #6 x 5/8" Lg.                |
| 14   | 75-010S     | 4    | Flat Washer #10  |
| 15   | 75-5524B    | 2    | Bolt, Carriage # $\frac{1}{4}$ -20x1.50 Lg. Black      |
| 16   | 75-015S     | 2    | Washer, Flat $\frac{1}{4}$ "                           |
| 17   | 75-915S     | 2    | Nut, $\frac{1}{4}$ -20, machine hexagon                |

Figure 22 Control Panel Assembly Parts List

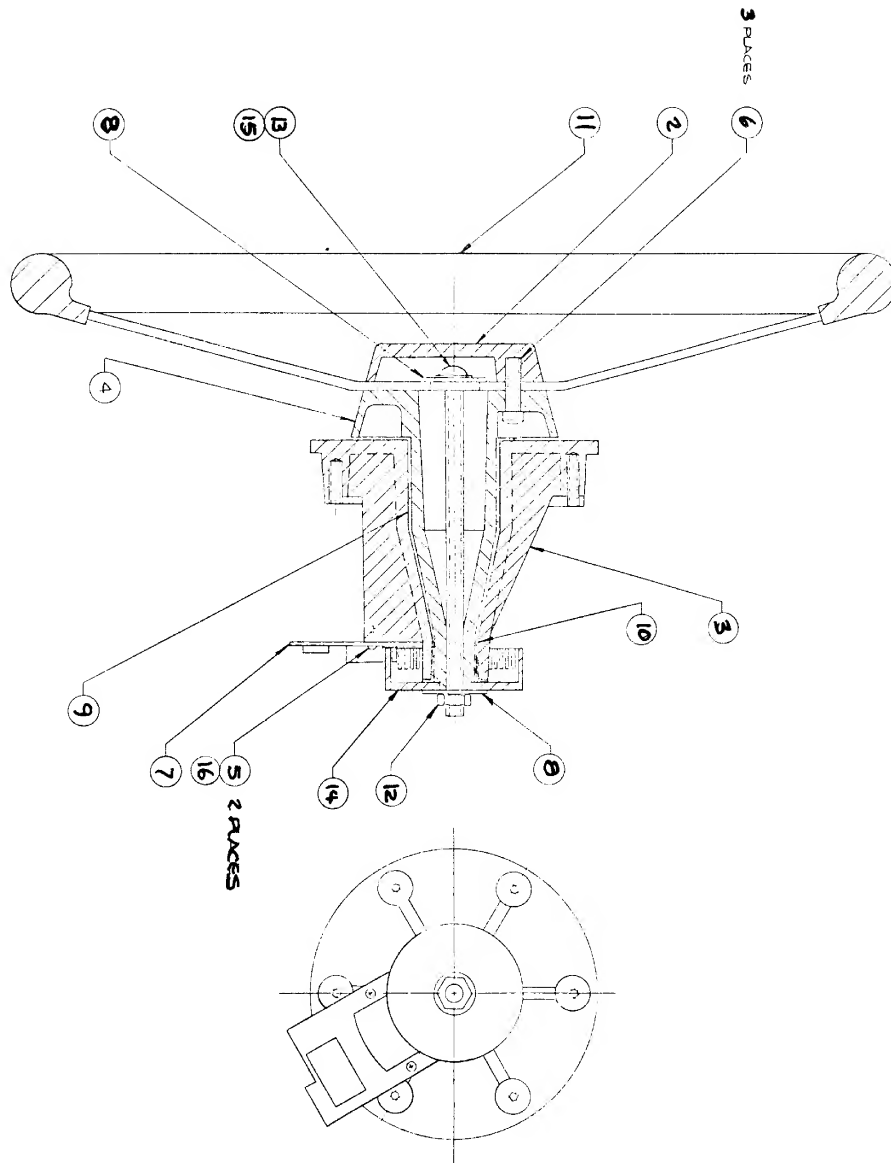


Figure 23 Steering Wheel Assembly A000598-02



| Item | Part Number | Qty. | DESCRIPTION  |
|------|-------------|------|--|
| 1    | A000598-02  | Ref  | Steering Wheel Assembly  |
| 2    | 002133      | 1    | Cover  |
| 3    | 000605      | 1    | Housing  |
| 4    | 000606      | 1    | Shaft  |
| 5    | 85-22F208   | 2    | SCR SMT Metal #2-56x $\frac{1}{2}$ Lg. "F"Type                       |
| 6    | 72-7512     | 3    | Mach Scr, $\frac{1}{4}$ -20 x $\frac{3}{4}$ Lg, Fillister Hd Slotted |
| 7    | A000607     | 1    | Printed Circuit Assembly   |
| 8    | 75-07002    | 2    | Washer, Fender, $\frac{1}{4}$  |
| 9    | 76-092020   | 1    | Bearing, Thompson (20L20-FK)   |
| 10   | 76-091010   | 1    | Bearing, Thompson (10L10-FK)   |
| 11   | 78-40104    | 1    | Steering Wheel, 10"  |
| 12   | 75-990505 S | 1    | Nut, $\frac{1}{4}$ -20, Nylon Lock, Shallow Pattern                  |
| 13   | 72-9580     | 1    | Mach Scr, $\frac{1}{4}$ -20 x 5 Lg, Truss Hd, Slotted                |
| 14   | 000616      | 1    | Hub Light  |
| 15   | 75-055      | 1    | Washer, $\frac{1}{4}$ " Int. Tooth, Starlock                         |
| 16   | 75-042      | 2    | Washer, Split Lock #2  |

Figure 23 Steering Wheel Assembly Parts List

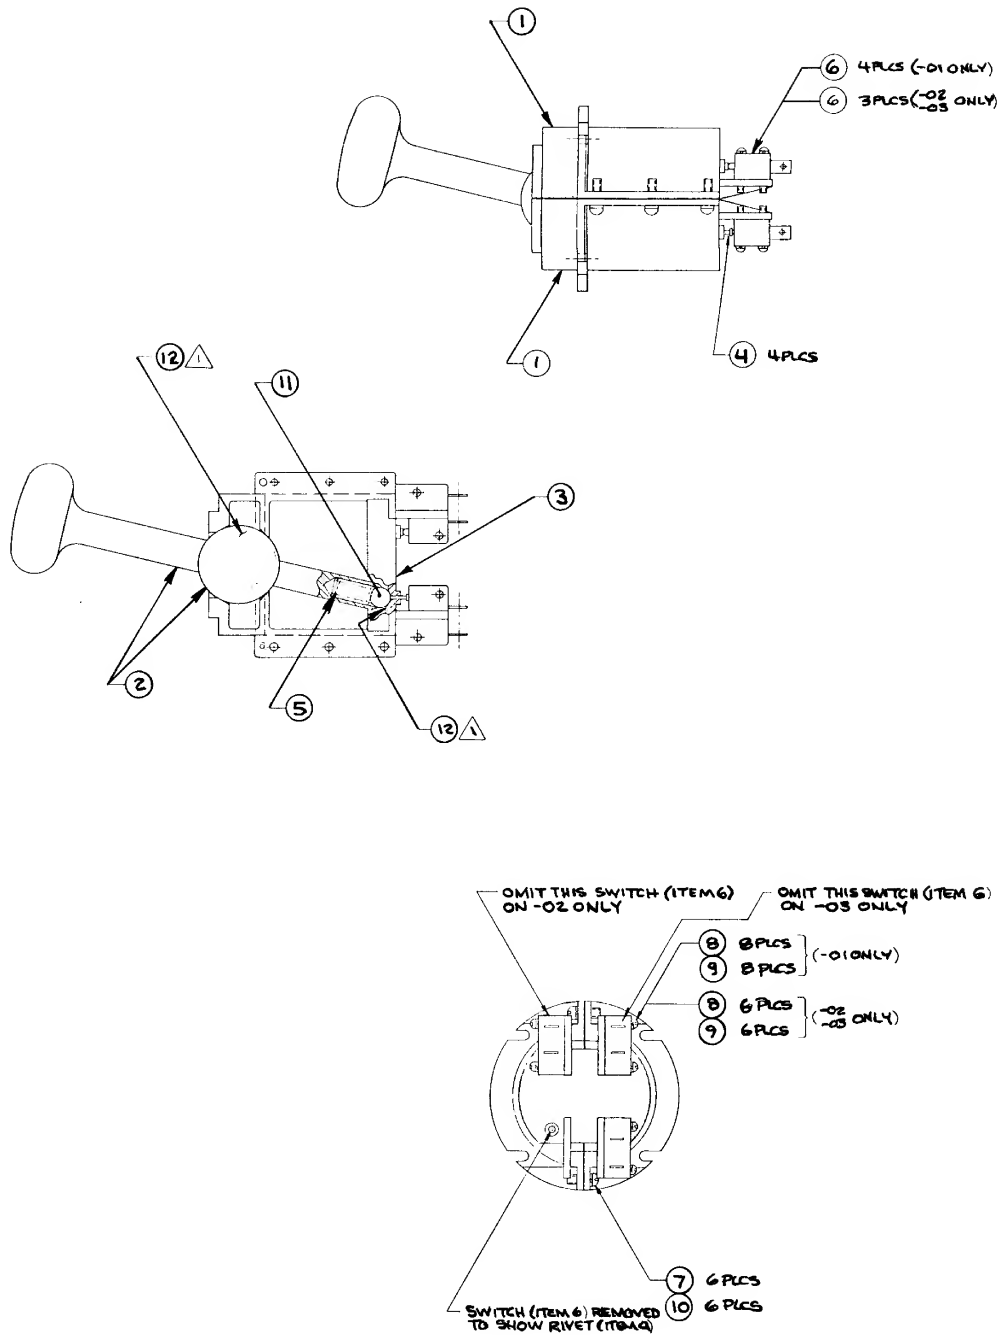


Figure 24 H-Shift Assembly, Less Switch  
A000608-03 P



| Item | Part Number | Qty. | Description  |
|------|-------------|------|--|
| 1    | 000609-01   | 2    | Shift Housing  |
| 2    | A000610     | 1    | Handle Assembly  |
| 3    | 000611      | 1    | Shift Detent   |
| 4    | 008994-01   | 4    | Shift Rivets   |
| 5    | 78-3002003  | 1    | Spring, Assoc. Spring Co. (Co. 360-032-1000M)  |
| 6    | 65-021A     | 3    | Switch, Cherry (E18-00M)   |
| 7    | 75-046      | 6    | Washers, #6 Split Lock   |
| 8    | 75-044      | 6    | Washers, #4 Split Lock   |
| 9    | 85-22F412   | 6    | Scr. Mach., 4-40 x 3/4 Lg. Pan Hd., Self Threading Type F  |
| 10   | 85-22F608   | 6    | Scr. Mach., 6-32 x 1/2 Lg. Pan Hd., Self Threading Type F  |
| 11   | 76-11375S   | 1    | Ball Steel, 3/8 Dia. Bearing Grade   |
| 12   | 78-16002    | A/R  | Silicone Compound, Dow Corning #5  |
| 13   | 78-33001    | 1    | Clamp, Hose  |
|      |             |      | NOTE: Item #13, 78-33001, Hose Clamp is to be used only with old Shift Housing P/N 000609 Rev. "D" |


 A Warner Communications Company

Figure 24 H-Shift Assembly, Less Switch, Parts List

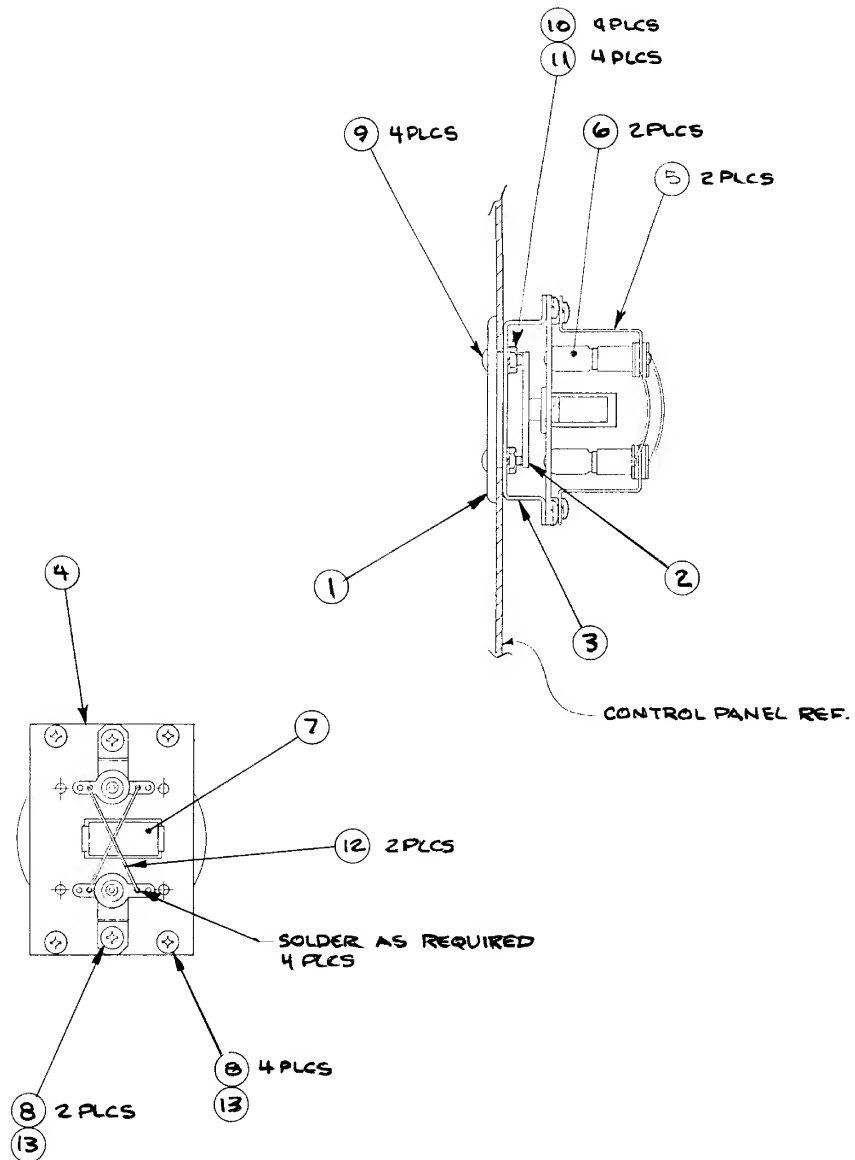


Figure 25 Start Button Assembly A007357-01 D





| Item | Part Number | Qty. | Description   |
|------|-------------|------|---|
| 1    | 006530-01   | 1    | Bezel   |
| 2    | 006535-01   | 1    | Button  |
| 3    | 006532-01   | 1    | Chassis   |
| 4    | A006533-01  | 1    | Switch Mtg. Plate Assembly                            |
| 5    | 79-4317     | 2    | Lamp Socket   |
| 6    | 70-11-47    | 2    | Lamp  |
| 7    | 62-020      | 1    | Switch, Cherry, E68-50A                               |
| 8    | 72-1603     | 6    | Mach Screw, 6-32 x $\frac{3}{16}$ Lg, Pan Hd, Phil.   |
| 9    | 82-8808     | 4    | Screw, Button hd socket 8-32x $\frac{1}{2}$ lg. Black |
| 10   | 75-918S     | 4    | Nut, 8-32   |
| 11   | 75-048      | 4    | Washer, #8, Split-Lock                                |
| 12   | 004577-19   | 2    | Jumper Wire, Black                                    |
| 13   | 75-046      | 6    | Washer, Split-Lock #6                                 |

Figure 25 Start Button Assembly Parts List

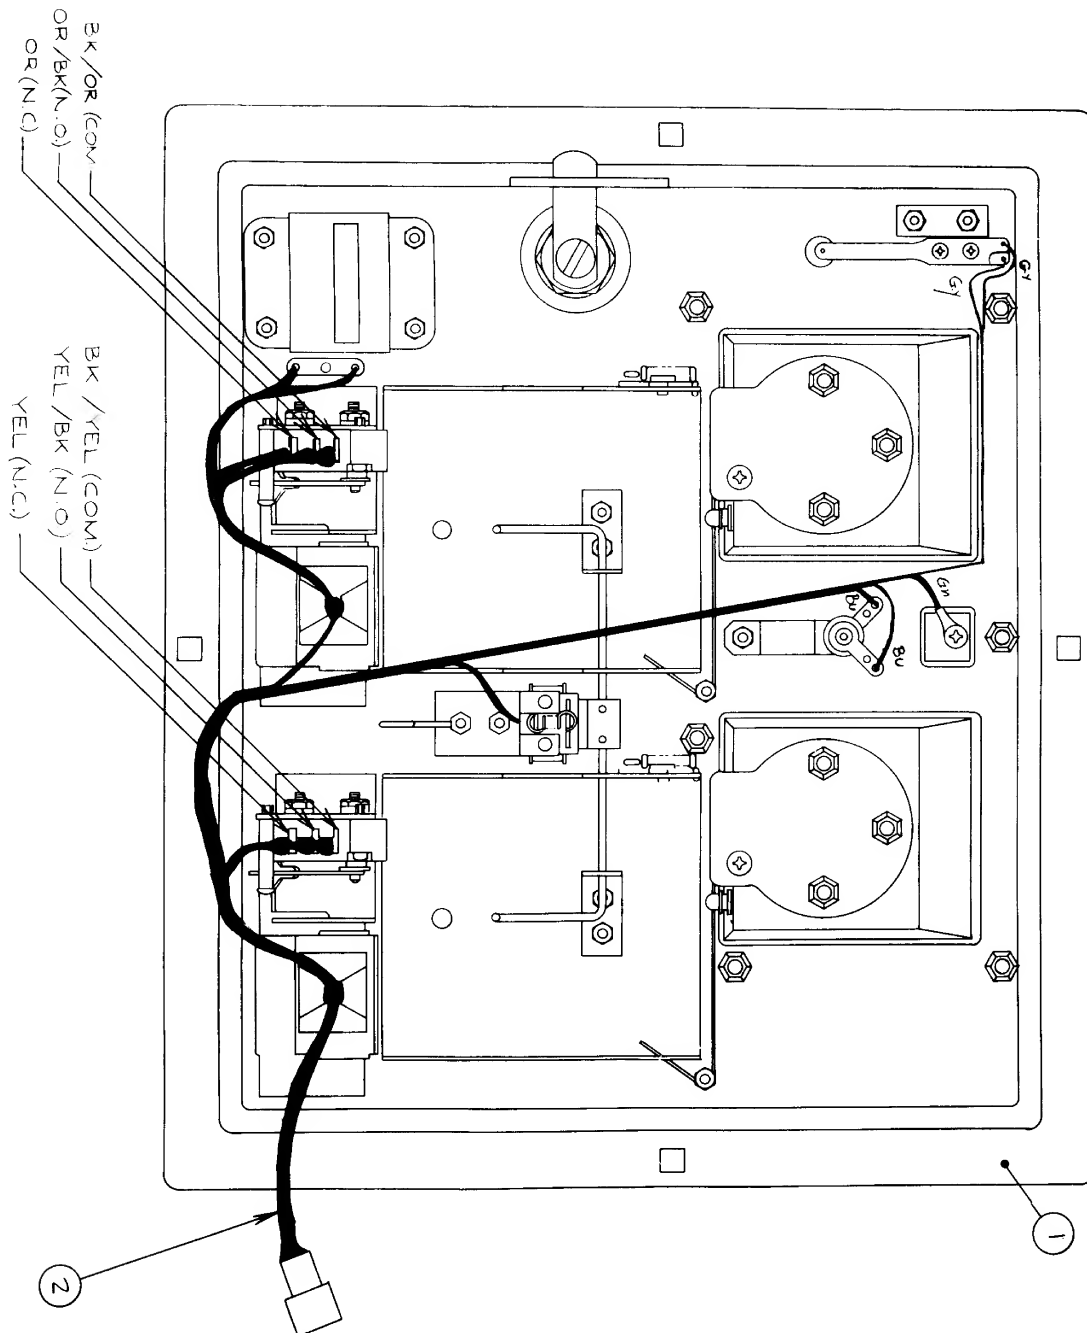


Figure 26 Coin Door Final Assembly A009083-01 through -07



Figure 5-4 Coin Door Final Assembly

| Item | Part Number | Qty. | Description  |
|------|-------------|------|--|
| 1    | A006794-01  | 1    | Coin Door Assy. for American Quarter Only -See Figure 5-5          |
|      | A006794-02  | Ref. | Coin Door Assy. for Belgian 5 Francs Only -See Figure 5-5          |
|      | A006794-03  | Ref. | Coin Door Assy. for German Mark Only -See Figure 5-5               |
|      | A006794-04  | Ref. | Coin Door Assy. for Swedish Krona Only -See Figure 5-5             |
|      | A006794-05  | Ref. | Coin Door Assy. for Japanese 100 Yen Only -See Figure 5-5          |
|      | A006794-06  | Ref. | Coin Door Assy. for English 10 Pence Only -See Figure 5-5          |
|      | A006794-07  | Ref. | Coin Door Assy. for Australian 20-Cent Piece Only - See Figure 5-5 |
| 2    | A006921-01  | 1    | Harness Assembly   |

A Warner Communications Company

Figure 26 Coin Door Final Assembly Parts List

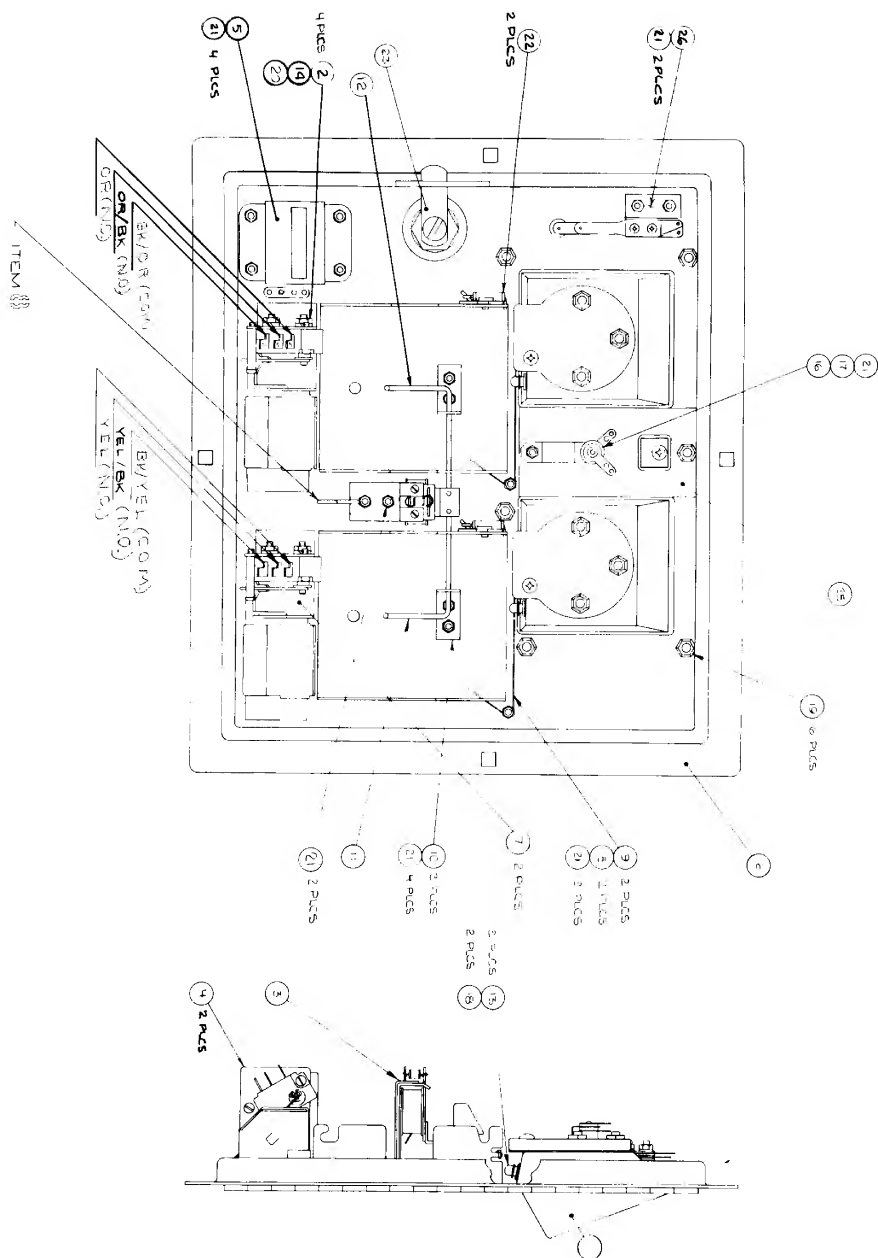


Figure 27 Coin Door Assembly A006794-01 through  
-07 C



| Item | Part Number | Qty. | Description  |
|------|-------------|------|--|
| 1    | A007637-01  | 1    | Front Bezel Assy. - Used only on -01 Coin Door Assy. |
|      | A007637-02  | Ref. | Front Bezel Assy. - Used only on -02 Coin Door Assy. |
|      | A007637-03  | Ref. | Front Bezel Assy. - Used only on -03 Coin Door Assy. |
|      | A007637-04  | Ref. | Front Bezel Assy. - Used only on -04 Coin Door Assy. |
|      | A007637-05  | Ref. | Front Bezel Assy. - Used only on -05 Coin Door Assy. |
|      | A007637-06  | Ref. | Front Bezel Assy. - Used only on -06 Coin Door Assy. |
|      | A007637-07  | Ref. | Front Bezel Assy. - Used only on -07 Coin Door Assy. |
| 2    | 75-9165     | 4    | Nut 6-32   |
| 3    | A007639-01  | 1    | Coin Lock-Out Assembly                               |
| 4    | A007640-01  | 2    | Coin Switch Assembly                                 |
| 5    | A002465-01  | 1    | Coin Counter Assembly                                |
| 6    | 004320-01   | 1    | Coin Door Weldment                                   |
| 7    | 004341-01   | 2    | Secondary Coin Chute                                 |
| 8    | 004344-01   | 1    | Key Loop   |
| 9    | 004340-01   | 2    | Spring-Return  |
| 10   | 004337-01   | 2    | Bracket, Wire Form                                   |
| 11   | 004338-01   | 1    | Lock-Out, Wire Form, R.H.                            |
| 12   | 004336-01   | 1    | Lock-Out, Wire Form, L.H.                            |
| 13   | 004326-01   | 2    | Button, Scavenger                                    |
| 14   | 75-046      | 4    | Lock Washer, #6                                      |
| 15   | 006904-01   | 2    | Spacer   |
| 16   | 007359-01   | 1    | Lamp Socket  |
| 17   | 70-11-47    | 1    | Lamp   |
| 18   | 73-3008     | 2    | Retaining "C" Ring, Tread #5103-25                   |
| 19   | 75-9914001  | 6    | Self-Threading Nut, Tinnerman #SR188006              |
| 20   | 75-026S     | 4    | Washer #6  |
| 21   | 75-00516    | 13   | Kepnut, Style 842, Std., 6-32                        |
| 22   | 008629-01   | 2    | Spring   |
| 23   | 71-2118     | 1    | Lock Assembly, Hudson Lock                           |
| 24   | 71-1225CU   | 2    | Coin Mechanism for American Quarter only             |
|      | 71-125FB    | Ref. | Coin Mechanism for Belgian 5 Francs Only             |
|      | 71-121MG    | Ref. | Coin Mechanism for German Mark only                  |
|      | 71-121KS    | Ref. | Coin Mechanism for Swedish Krona Only                |
|      | 71-12100YJ  | Ref. | Coin Mechanism for Japanese 100 Yen Only             |
|      | 71-1210PE   | Ref. | Coin Mechanism for English 10 Pence Only             |
|      | 71-1220CA   | Ref. | Coin Mechanism for Australian 20-Cent Piece only     |
| 25   | 007753-01   | 1    | Plate, Anti-Probe                                    |
| 26   | A007638-01  | 1    | Switch Assembly - Slam                               |

 A Warner Communications Company

Figure 27 Coin Door Assembly Parts List

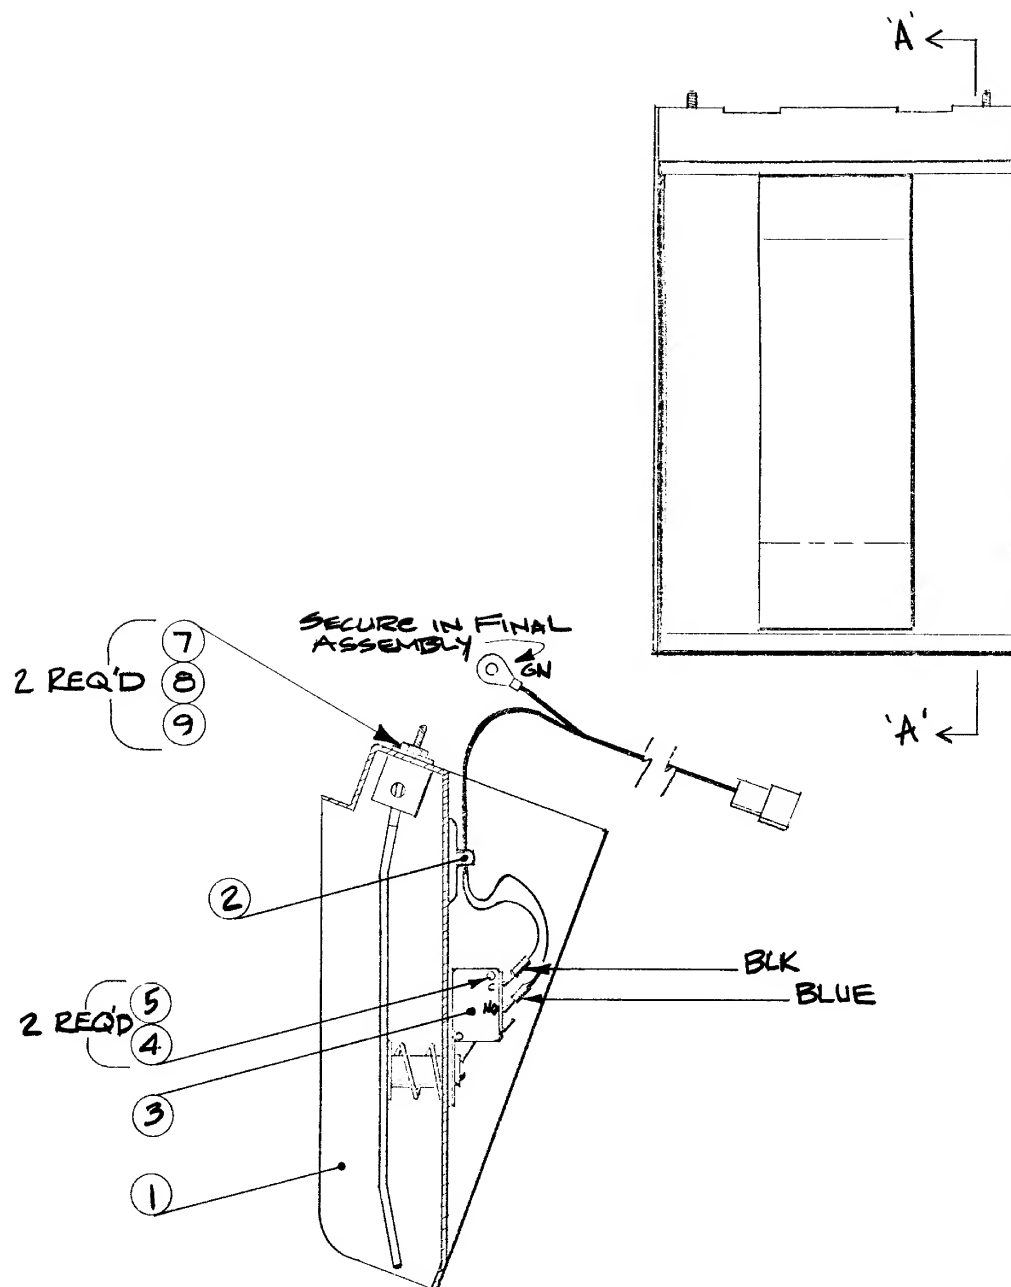


Figure 28 Single Foot Pedal Assembly A008845-01 B



| Item | Part Number | Qty. | Description                       |
|------|-------------|------|-----------------------------------|
| 1    | A007183-01  | 1    | Foot Pedal Assembly               |
| 2    | A008955-01  | 1    | Harness Assembly, Foot Pedal      |
| 3    | A009804-01  | 1    | Assy, Micro Switch & Bracket      |
| 4    | 75-046      | 2    | Lock Washer #6                    |
| 5    | 75-916S     | 2    | Nut, Hex, #6-32                   |
| 6    |             |      |                                   |
| 7    | 75-043      | 2    | Washer, Split-Lock, 5/16"         |
| 8    | 75-915S     | 2    | ¼"-20 Hex Nut                     |
| 9    | 75-5524B    | 2    | Carriage Bolt, Blk, ¼"-20 x 1.50" |

Figure 28 Single Foot Pedal Assembly Parts List

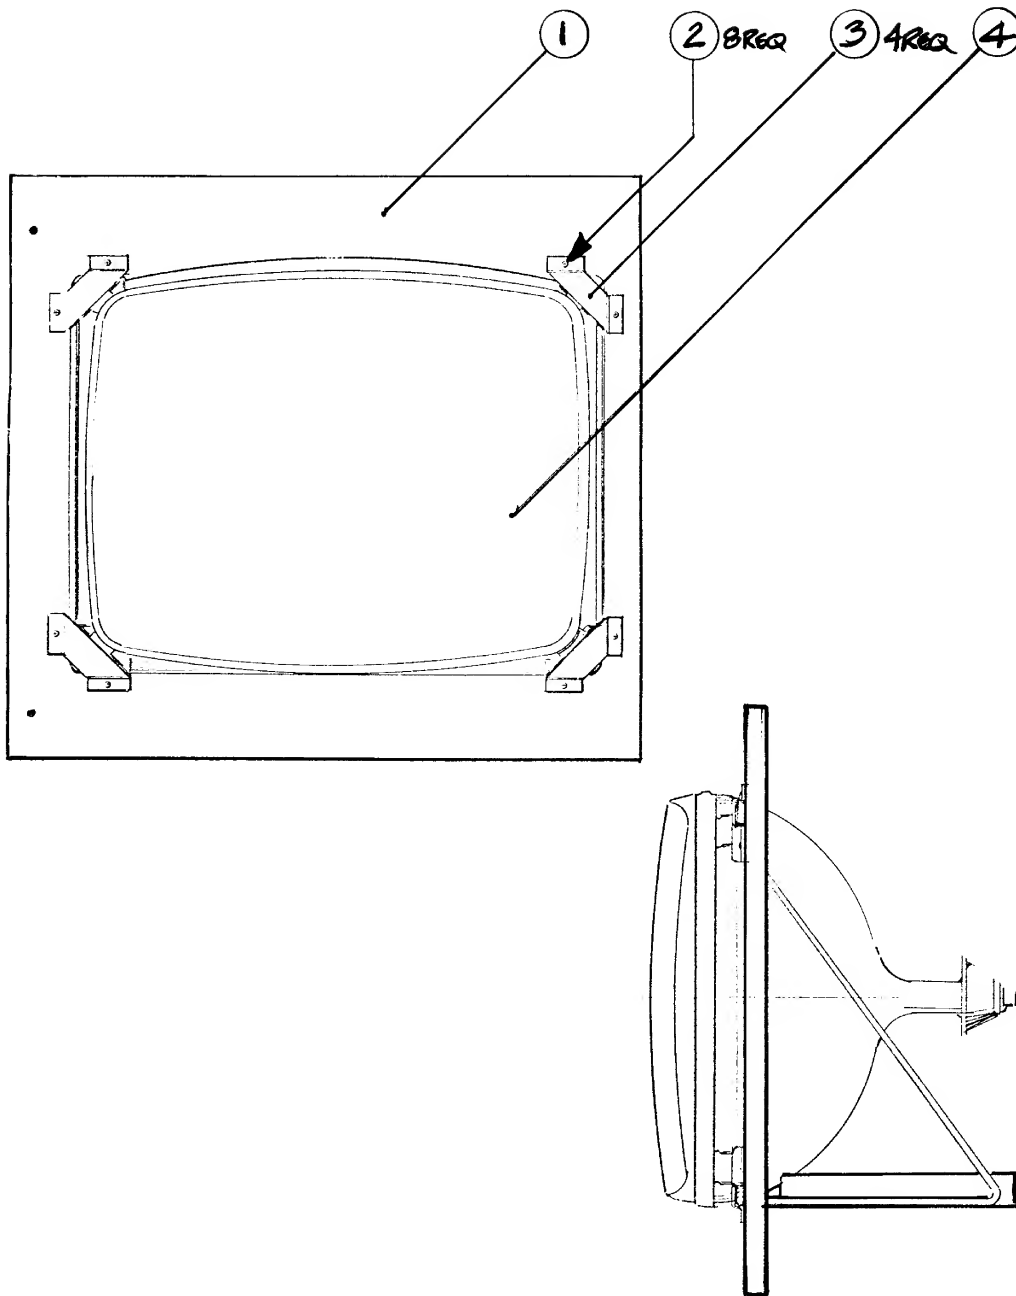


Figure 29 T.V. Tray Assembly A008766-01 B





| Item | Part Number | Qty. | Description   |
|------|-------------|------|---|
| 1    | 008755-01   | 1    | T.V. Tray   |
| 2    | 72-6812     | 8    | Screws, Self-Tapping, #8 x 3/4 Phil. Pan Hd.          |
| 3    | 005594      | 4    | Monitor Tie-Down                                      |
| 4    | 90-032      | 1    | T.V., Motorola 23" (M7000-155)<br>or TEC Model TM-623 |


 A Warner Communications Company

Figure 29 T.V. Tray Assembly Parts List

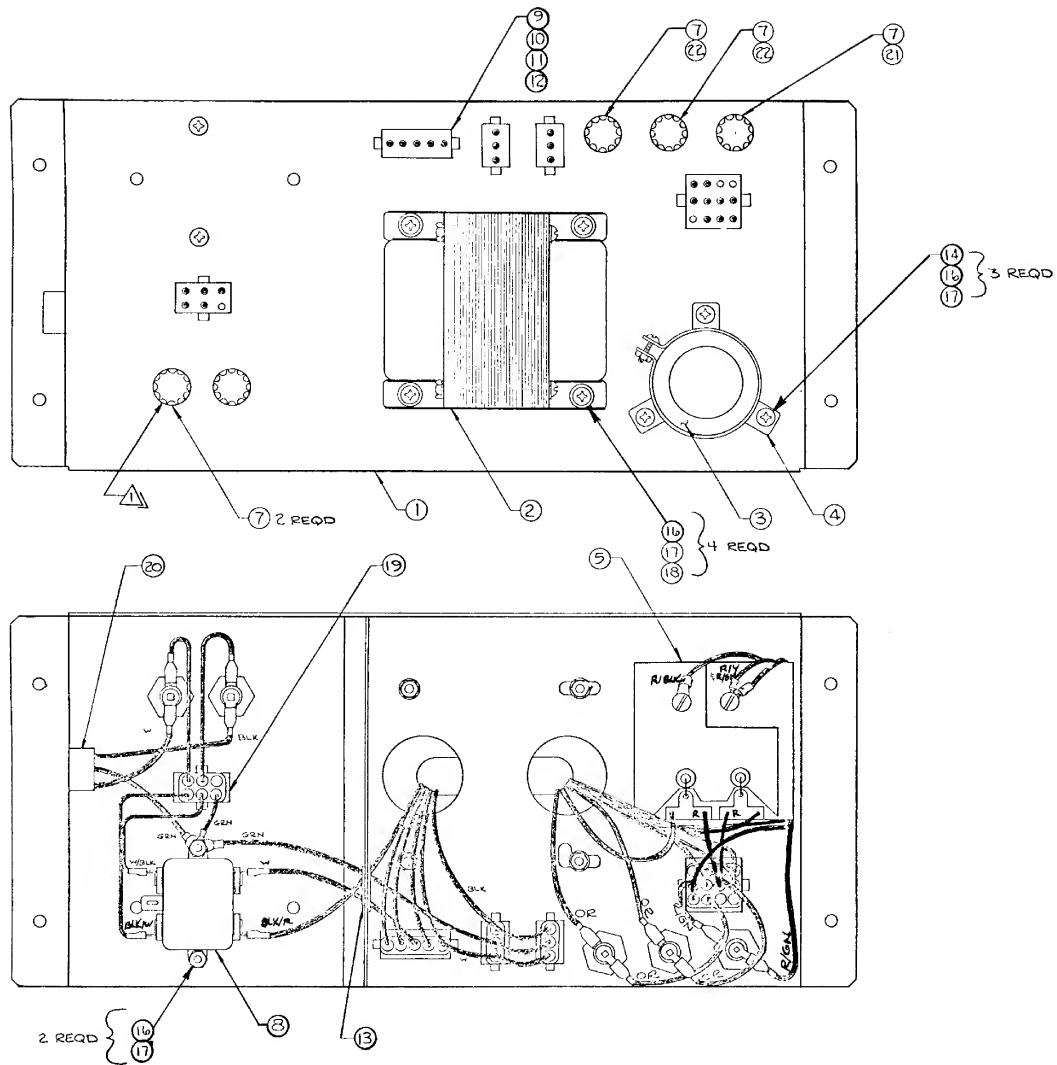


Figure 30 Power Supply Assembly A007197-01 G



| Item | Part Number | Qty. | Description                               |
|------|-------------|------|---|
| 1    | A009266-01  | 1    | Power Supply Base Weldment Assembly       |
| 2    | A006886-01  | 1    | Transformer Termination Assembly "Type B" |
| 3    | 29-053      | 1    | Cap., Sprague Electrolytic 26,000uf @ 15V |
| 4    | 78-70501SC  | 1    | Brkt., Cap. Mtg. Sprague #4586-48         |
| 5    | A006555-01  | 1    | P.C. Board Rectifier                      |
| 6    |             |      |   |
| 7    | 79-4411004  | 5    | Fuse Holder, Panel Mounting               |
| 8    | 41-2003     | 1    | Filter, Power Line, 5 AMP                 |
| 9    | A006958-01  | A/R  | Volt Sel Block 95V                        |
| 10   | A006958-02  | "    | Volt Sel Block 110V                       |
| 11   | A006958-03  | "    | Volt Sel Block 205V                       |
| 12   | A006958-04  | "    | Volt Sel Block 220V                       |
| 13   | 78-2708     | 1    | Grommet, Plastic                          |
| 14   | 72-18105    | 9    | Screw Pan Hd., #8-32 x 5/8" LG.           |
| 15   |             |      |   |
| 16   | 75-048      | 9    | Washer, Split Lock #8                     |
| 17   | 75-918S     | 9    | Nut Hex #8                                |
| 18   | 75-018S     | 4    | Washer Flat #8                            |
| 19   | A007192-01  | 1    | Power Switch Termination                  |
| 20   | A007444-01  | 1    | Power In Harness                          |
| 21   | 46-203801   | 1    | Fuse, 8 AMP, 125V, 3 AG Fast Acting       |
| 22   | 46-201251   | 2    | Fuse, 2 1/2 AMP, 125V, Slow Acting        |

Figure 30 Power Supply Assembly Parts List





| Item | Part Number | Qty. | Description                                  |
|------|-------------|------|--|
| 1    | 006549-01   | 1    | P.C. Board                                   |
| 2    | 79-517222   | 1    | Connector, 44-Pin P.C. Mount                 |
| 3    | 27-250104   | 17   | Cap, Cer Disc, 0.1 $\mu$ f, 25V              |
| 4    | 41-3003     | 6    | Inductor, 100 $\mu$ H                        |
| 5    | 52-004      | 6    | Jumper, .3 Center                            |
| 6    | 52-003      | 3    | Jumper, .6 Center                            |
| 7    | 41-3004     | 5    | Inductor, 100 $\mu$ H                        |
| 8    | 27-A250104  | 8    | Cap, Cer Disc, 0.1 $\mu$ f, 25V (Bottom Row) |

Figure 31 RF Shield PCB Assembly Parts List

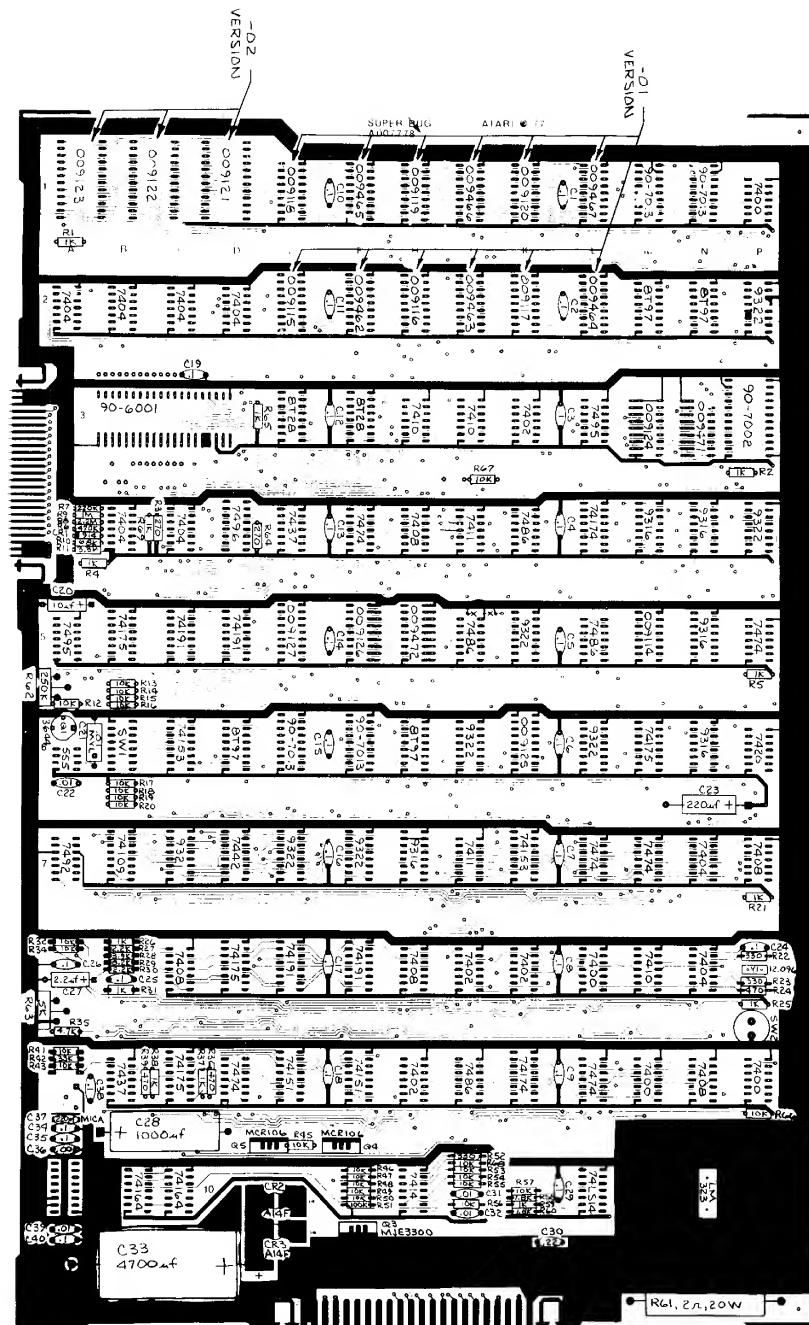


Figure 32 Super Bug Game PCB Assembly  
A007778-01 & -02

# PROM version



| Item | Part Number | Qty. | Description   |
|------|-------------|------|---|
| 1    | 007779-01   | 1    | P.C. Board  |
| 2    | 10-5102     | 13   | Res., Carbon, 1/4, 1/2, 1K OHM R1,2,4,5,21,25,26,31,37, 38,59, 65, 69 |
| 3    | 10-5103     | 27   | " " " " 10K " R12-20, 32,34, 41, 42, 45-50, 51-57, 66-69              |
| 4    | 10-5104     | 1    | " " " " 100K " R51  |
| 5    | 10-5105     | 1    | " " " " 1M " R9   |
| 6    | 10-5182     | 2    | " " " " 1.8K " R58,60   |
| 7    | 10-5271     | 2    | " " " " 270 " R3, 64  |
| 8    | 10-5222     | 2    | " " " " 2.2K " R27, 30  |
| 9    | 10-5224     | 1    | " " " " 220K " R7   |
| 10   | 10-5225     | 1    | " " " " 2.2M " R8   |
| 11   | 10-5331     | 3    | " " " " 330 " R22, 23, 52   |
| 12   | 10-5333     | 1    | " " " " 33K " R42   |
| 13   | 10-5392     | 1    | " " " " 3.9K " R28  |
| 14   | 10-5335     | 1    | " " " " 3.3M " R11  |
| 15   | 10-5471     | 3    | " " " " 470 " R24, 36, 39   |
| 16   | 10-5472     | 1    | " " " " 4.7K " R35  |
| 17   | 10-5474     | 1    | " " " " 470K " R6   |
| 18   | 10-5683     | 1    | " " " " 68K " R10   |
| 19   | 10-5822     | 1    | " " " " 8.2K " R29  |
| 20   | 19-315502   | 1    | Trimpot 5K OHM R63  |
| 21   | 19-315254   | 1    | Trimpot 250K OHM R62  |
| 22   | 19-809W220  | 1    | Res., Wirewound 20W, 2 OHM R61  |
| 23   |             |      |   |
| 24   |             |      |   |
| 25   |             |      |   |

| Item | Part Number | Qty. | Description                                 |
|------|-------------|------|---|
| 26   | 21-101101   | 1    | Cap., Mylar, .01uf 100V C21                 |
| 27   | 24-250225   | 1    | " Electrolytic, 2.2uf 25V C27               |
| 28   | 24-250106   | 1    | " " 10uf " C20                              |
| 29   | 24-250227   | 1    | " " 220uf " C23                             |
| 30   | 24-250108   | 1    | " " 1000uf " C28                            |
| 31   | 24-250478   | 1    | " " 4700uf " C33                            |
| 32   | 27-250224   | 1    | " Ceramic Disc .22uf " C30                  |
| 33   | 27-250102   | 1    | " " .001uf " C36                            |
| 34   | 27-250103   | 4    | " " .01uf " C22,31,32,39                    |
| 35   | 27-250104   | 27   | " " .1uf " C1-19, 24-26, 29, 34, 35, 38, 40 |
| 36   | 28-101221   | 1    | " Dipped Mica, .220pf 100V C37              |
| 37   |             |      |   |
| 38   |             |      |   |
| 39   |             |      |   |
| 40   | 31-A14F     | 2    | Diode, A14F CR2, 3                          |
| 41   | 31-1N914    | 1    | Diode, 1N914 CR1                            |
| 42   |             |      |   |
| 43   |             |      |   |
| 44   |             |      |   |
| 45   | 33-2N3644   | 1    | Transistor, 2N3644 Q1                       |
| 46   | 34-MJE3300  | 1    | " MJE3300 Q3                                |
| 47   | 35-MCR106-1 | 2    | SCR MCR106-1 Q4, 5                          |
| 48   |             |      |   |
| 49   |             |      |   |
| 50   |             |      |   |
| 51   | 37-7400     | 4    | Integrated Circuit, 7400 P1, L8, M9, P9,    |
| 52   | 37-7402     | 4    | " 7402 K3, J8, K8, H9,                      |
| 53   | 37-7404     | 8    | " 7404 A2, B2, C2, D2, B4, C4, M7, N8       |
| 54   | 37-7408     | 5    | " 7408 H4, P7, C8, N8, M9                   |
| 55   | 37-7410     | 3    | " 7410 H3, J3, M8                           |
| 56   | 37-7411     | 2    | " 7411 J4, J7                               |
| 57   | 37-7414     | 1    | " 7414 H10                                  |
| 58   | 37-741514   | 1    | " 741514 L10                                |
| 59   | 37-7420     | 1    | " 7420 P6                                   |
| 60   | 37-7437     | 2    | " 7437 E4, B9                               |
| 61   | 37-7442     | 1    | " 7442 D7                                   |

Atari Communications Company

| Item | Part Number | Qty. | Description                                  |
|------|-------------|------|--|
| 62   | 37-7474     | 6    | Integrated Circuit 7474 F4,P5,L7,M7,D9,L9    |
| 63   | 37-7486     | 4    | " 7486 K4,J5,L5,J9,                          |
| 64   | 37-7490     | 1    | " 7490 D4                                    |
| 65   | 37-7492     | 1    | " 7492 A7                                    |
| 66   | 37-7495     | 2    | " 7495 L3, H5                                |
| 67   | 37-74151    | 2    | " 74151 E9, F9                               |
| 68   | 37-74153    | 2    | " 74153 C6, K7                               |
| 69   | 37-74164    | 2    | " 74164 B10, C10                             |
| 70   | 37-74174    | 2    | " 74174 L4, K9                               |
| 71   | 37-74175    | 4    | " 74175 B5,M6,D8,C9                          |
| 72   | 37-74191    | 4    | " 74191 C5, D5,E8,F8,                        |
| 73   | 37-74109    | 1    | " 74109 B7                                   |
| 74   | 37-9316     | 5    | " 9316 M4,N4,M5,N7                           |
| 75   | 37-9321     | 1    | " 9321 C7                                    |
| 76   | 37-9322     | 7    | " 9322 P2, P4, K5, J6,L6,E7, F7              |
| 77   | 37-8T28     | 2    | " 8T28 E3, F3                                |
| 78   | 37-8T97     | 4    | " 8T97 M2, N2, D6,H6                         |
| 79   | 37-555      | 1    | " 555 A6                                     |
| 80   | 37-LM323    | 1    | Regulator LM323                              |
| 81   | 37-TDA1004  | 1    | Op-AMP TDA1004 A10                           |
| 82   |             |      |  |
| 83   |             |      |  |
| 84   |             |      |  |
| 85   | 62-001      | 1    | Switch, SPST, Momentary SW2                  |
| 86   | 6-6118P17   | 1    | Switch, SPST x 8 Dip SW1                     |
| 87   |             |      |  |
| 88   |             |      |  |
| 89   |             |      |  |
| 90   | 75-1608C    | 2    | Screws, Pan Hd., Phil., 6-32 x 1/2 Lg. Cress |
| 91   | 75-016      | 2    | Washer, Flat #6                              |
| 92   | 75-056      | 2    | Washer, Lock, Int. Star #6                   |
| 93   | 75-016C     | 2    | Nut, Hex #6-32 Cress                         |
| 94   |             |      |  |
| 95   |             |      |  |
| 96   |             |      |  |
| 97   | 78-06001    | 1    | Heatsink (LM323)                             |
| 98   | 78-16032    | 1    | Heatsink (TDA1004)                           |

| Item | Part Number | Qty. | Description                      |
|------|-------------|------|----------------------------------|
| 99   | 78-13016    | A/R  | Cement (TDA1004 Heatsink)        |
| 100  | 78-16005    | 1    | Silpad (LM323)                   |
| 101  |             |      |                                  |
| 102  |             |      |                                  |
| 103  |             |      |                                  |
| 104  | 79-42040    | 1    | Socket 40 Pin, Med Insertion C3  |
| 105  | 79-42115    | 4    | Socket 18 Pin M3,N3,F5,H5        |
| 106  |             |      |                                  |
| 107  |             |      |                                  |
| 108  | 90-102      | 1    | Crystal, 12.096 MHz Y1           |
| 109  |             |      |                                  |
| 110  |             |      |                                  |
| 111  |             |      |                                  |
| 112  | 90-6001     | 1    | Integrated Circuit C3            |
| 113  | 90-7002     | 1    | " P3                             |
| 114  | 90-7013     | 4    | " M1, N1, E6, F6                 |
| 115  |             |      |                                  |
| 116  | 009471      | 1    | Super Bug Alpha-Number Prom 2 N3 |
| 117  | 009472      | 1    | " " Playfield Prom 3 H5          |
| 118  | 009114      | 1    | Super Bug Sys. Prom M5           |
| 119  | 009115      | 1    | Super Bug Program Prom 1 E2      |
| 120  | 009116      | 1    | " " " " 2 H2                     |
| 121  | 009117      | 1    | " " " " 3 K2                     |
| 122  | 009118      | 1    | " " " " 4 E1                     |
| 123  | 009119      | 1    | " " " " 5 M1                     |
| 124  | 009120      | 1    | " " " " 6 K1                     |
| 125  | 009124      | 1    | Super Bug Alpha-Number Prom 1 M3 |
| 126  | 009125      | 1    | Super Bug Car Picture Prom K6    |
| 127  | 009126      | 1    | Super Bug Playfield Prom 1 F5    |
| 128  | 009127      | 1    | Super Bug Playfield Prom 2 E5    |
| 129  | 009462      | 1    | Super Bug Program Prom 7 F2      |
| 130  | 009463      | 1    | " " " " 8 J2                     |
| 131  | 009464      | 1    | " " " " 9 L2                     |
| 132  | 009465      | 1    | " " " " 10 F1                    |
| 133  | 009466      | 1    | " " " " 11 J1                    |
| 134  | 009467      | 1    | " " " " 12 L1                    |

Figure 32 Super Bug Game PCB Assembly Parts List

# ROM version



| Item | Part Number | Qty. | Description   |
|------|-------------|------|---|
| 1    | 90779-01    | 1    | P.C. Board  |
| 2    | 10-5102     | 13   | Res., Carbon, 5%, Wb. 1K 20M R1,2,4,5,21,25,26,31,37, 38,59, 65, 69 |
| 3    | 10-5103     | 27   | " " " " 17K " R13,20, 32,34, 45-50, 53-57, 66-68                    |
| 4    | 10-5104     | 1    | " " " " 100K " R51  |
| 5    | 10-5105     | 1    | " " " " 1M " R9   |
| 6    | 10-5182     | 2    | " " " " 1.8K " R38,60   |
| 7    | 10-5271     | 2    | " " " " 270 " R3, 94  |
| 8    | 10-5222     | 2    | " " " " 2.2K " R27, 30  |
| 9    | 10-5224     | 1    | " " " " 220K " R7   |
| 10   | 10-5225     | 1    | " " " " 2.2M " R8   |
| 11   | 10-5331     | 3    | " " " " 330 " R22, 23, 52   |
| 12   | 10-5333     | 1    | " " " " 33K " R42   |
| 13   | 10-5392     | 1    | " " " " 3.3K " R28  |
| 14   | 10-5335     | 1    | " " " " 3.3M " R11  |
| 15   | 10-5471     | 3    | " " " " 470 " R24, 36, 39   |
| 16   | 10-5472     | 1    | " " " " 4.7K " R35  |
| 17   | 10-5474     | 1    | " " " " 470K " R6   |
| 18   | 10-5683     | 1    | " " " " 68K " R10   |
| 19   | 10-5822     | 1    | " " " " 820K " R29  |
| 20   | 19-315502   | 1    | Trimpot 5K 20M R63  |
| 21   | 19-315254   | 1    | Trimpot 250K 20M R62  |
| 22   | 19-9D 9W2P0 | 1    | Res., Wirewound 20W, 2 10M R61                                      |

| Item | Part Number | Qty. | Description                                  |
|------|-------------|------|--|
| 62   | 37-7474     | 4    | Integrated Circuit 7474 F4,F5,L7,M7,D9,L9    |
| 63   | 37-7486     | 4    | " " " " 7486 K4,F5,L5,J8,                    |
| 64   | 37-7494     | 1    | " " " " 7494 G D4                            |
| 65   | 37-7492     | 1    | " " " " 7492 A7                              |
| 66   | 37-7495     | 2    | " " " " 7495 L3, H5                          |
| 67   | 37-74151    | 2    | " " " " 74151 F9, F9                         |
| 68   | 37-74153    | 2    | " " " " 74153 C6, K7                         |
| 69   | 37-74164    | 2    | " " " " 74164 B10, C10                       |
| 70   | 37-74174    | 2    | " " " " 74174 L4, K9                         |
| 71   | 37-74175    | 4    | " " " " 74175 B5,M6,D8,C9                    |
| 72   | 37-74191    | 4    | " " " " 74191 C5, D5,E8,F8,                  |
| 73   | 37-74109    | 1    | " " " " 74109 B7                             |
| 74   | 37-9316     | 5    | " " " " 9316 M4,N4,M5,H7                     |
| 75   | 37-9321     | 1    | " " " " 9321 C7                              |
| 76   | 37-9322     | 2    | " " " " 9322 P2, P4, K5, J6,L6,E7, F7        |
| 77   | 37-8728     | 2    | " " " " 8728 E3, F3                          |
| 78   | 37-8797     | 4    | " " " " 8797 M2, N2, D6,H6                   |
| 79   | 37-555      | 1    | " " " " 555 A6                               |
| 80   | 37-LM323    | 1    | Regulator LM323                              |
| 81   | 37-TDA1004  | 1    | Op-AMP TDA1004 A10                           |
| 82   |             |      |  |
| 83   |             |      |  |
| 84   |             |      |  |
| 85   | 62-001      | 1    | Switch, SPST, Momentary SW2                  |
| 86   | 66-118P17   | 1    | Switch, SPST x 8 Dip SW1                     |
| 87   |             |      |  |
| 88   |             |      |  |
| 89   |             |      |  |
| 90   | 71-1608C    | 2    | Screws, Pan Hd., Phil., 6-32 x 1/2, 1/4, 1/8 |
| 91   | 75-016      | 2    | Washer, Flat #6                              |
| 92   | 75-056      | 2    | Washer, Lock, Int. Star #6                   |
| 93   | 75-916C     | 2    | Nut, Hex #6-32 1/4                           |
| 94   |             |      |  |
| 95   |             |      |  |
| 96   |             |      |  |
| 97   | 78-06901    | 1    | Heatsink (LM323)                             |
| 98   | 78-06922    | 1    | Heatsink (TDA1004)                           |

| Item | Part Number | Qty. | Description                                     |
|------|-------------|------|---|
| 26   | 21-101103   | 1    | Cap., Mylar, .01uF 100V C21                     |
| 27   | 24-250225   | 1    | " Electrolytic, 2.2uF 25V C27                   |
| 28   | 24-250106   | 1    | " " " " 10uF " C20                              |
| 29   | 24-250227   | 1    | " " " " 220uF " C23                             |
| 30   | 24-250108   | 1    | " " " " 1000uF " C28                            |
| 31   | 24-250476   | 1    | " " " " 4700uF " C33                            |
| 32   | 27-250224   | 1    | " Ceramic Disc .22uF " C30                      |
| 33   | 27-250102   | 1    | " " " " .001uF " C36                            |
| 34   | 27-250103   | 4    | " " " " .01uF " C22,31,32,39                    |
| 35   | 27-250104   | 27   | " " " " .1uF " C1-19, 24-26, 29, 34, 35, 38, 40 |
| 36   | 28-101221   | 1    | " Dipped Mica, 220pf 100V C37                   |
| 37   |             |      |   |
| 38   |             |      |   |
| 39   |             |      |   |
| 40   | 31-A14F     | 2    | Diode, A14F CR2, 3                              |
| 41   | 31-LM914    | 1    | Diode, LM914 CR1                                |
| 42   |             |      |   |
| 43   |             |      |   |
| 44   |             |      |   |
| 45   | 33-2N3644   | 1    | Transistor, 2N3644 Q1                           |
| 46   | 34-MJE3300  | 1    | " MJE3300 Q3                                    |
| 47   | 35-MCR106-1 | 2    | SCR MCR106-1 Q4, 5                              |
| 48   |             |      |   |
| 49   |             |      |   |
| 50   |             |      |   |
| 51   | 37-7400     | 4    | Integrated Circuit, 7400 P1, L8, M9, P9,        |
| 52   | 37-7402     | 4    | " " " " 7402 K3, J8, K8, H9,                    |
| 53   | 37-7404     | 8    | " " " " 7404 A2, B2, C2, D2, B4, C4, 37, 38     |
| 54   | 37-7408     | 5    | " " " " 7408 H4, P7, C6, H8, M8                 |
| 55   | 37-7410     | 3    | " " " " 7410 H3, J3, M8                         |
| 56   | 37-7411     | 2    | " " " " 7411 J4, J7                             |
| 57   | 37-7414     | 1    | " " " " 7414 H10                                |
| 58   | 37-741514   | 1    | " " " " 741514 L10                              |
| 59   | 37-7420     | 1    | " " " " 7420 P6                                 |
| 60   | 37-7437     | 2    | " " " " 7437 E4, H9                             |
| 61   | 37-7442     | 1    | " " " " 7442 D7                                 |

| Item | Part Number | Qty. | Description                      |
|------|-------------|------|----------------------------------|
| 99   | 78-13016    | A/R  | Cement (TDA1004 Heatsink)        |
| 100  | 78-16005    | 1    | Silipad (LM323)                  |
| 101  |             |      |                                  |
| 102  |             |      |                                  |
| 103  |             |      |                                  |
| 104  | 79-42040    | 1    | Socket 40 Pin, Med Insertion C3  |
| 105  | 79-42118    | 4    | Socket 18 Pin M3,N3,F5,H5        |
| 106  |             |      |                                  |
| 107  |             |      |                                  |
| 108  | 90-102      | 1    | Crystal, 12.096 MHz Y1           |
| 109  |             |      |                                  |
| 110  |             |      |                                  |
| 111  |             |      |                                  |
| 112  | 90-6001     | 1    | Integrated Circuit C3            |
| 113  | 90-7002     | 1    | Integrated Circuit P3            |
| 114  | 90-7013     | 4    | Integrated Circuit M1,N1,E6,F6   |
| 115  |             |      |                                  |
| 116  | 009471      | 1    | Super Bug Alpha-Number Prom 2 N3 |
| 117  | 009472      | 1    | " " " " Playfield Prom 3 H5      |
| 118  | 009114      | 1    | Super Bug Sync Prom M5           |
| 119  | 009121      | 1    | Super Bug Program Rom 1 D1       |
| 120  | 009122      | 1    | " " " " " 2 C1                   |
| 121  | 009123      | 1    | " " " " " 3 A1                   |
| 122  | 009124      | 1    | Super Bug Alpha-Number Prom 1 M3 |
| 123  | 009125      | 1    | Super Bug Car Picture Prom K6    |
| 124  | 009126      | 1    | Super Bug Playfield Prom 1 F6    |
| 125  | 009127      | 1    | Super Bug Playfield Prom 2 E5    |

Figure 32 Super Bug Game PCB Assembly Parts List